

感谢您购买 奥兰多汉特 无动力拖车系列 **OH32M2 KT** 低台平板拖车模型。
请您务必仔细阅读说明书，根据说明书的提示来帮助您完成您的模型。
本套件为KIT散件版本，需要您动手组装上色及调试。
Thanks for choosing **ORLANDO - HUNTER TRAILER Series OH32M2 KT** model.
Please read our instructions carefully, and following our instructions to help you finish assembling the model. The kits are parts, need assembling, debugging by yourself.

您还需要购买涂料、遮盖胶带、流缝胶、美工刀等工具辅料，来协助您完成您的模型。
Besides, in order to finish your model, following Supplementary material you also need to buy: Coating, Masking Tape, Seam Glue, Utility Knife.



如您的前车(牵引车)使用的是"D4L"2.4Ghz 4合1遥控套装，还可以选购"D201N"遥控灯组配合"D4L"遥控套装，使拖挂房车的灯光系统和前车的灯光系统进行联动，遥控灯组灯光配置包含：(大灯、辅助灯、转向/双闪灯、刹车灯、倒车灯)，使模型更仿真。

You can use "D201N 2in1 Light Control Set" for OH32N01, if "D4L 2.4Ghz 4 in 1 Remote Control Set" was used in the front one (for towing). D201N can be controlled by D4L and synchronize the light of OH32N01 with that of front one.
These parts are included in the 'D201N 2in1 Light Control Set': headlamps, auxiliary lamps, turn signal, hazard lights, brake lamps, reversing lights.
You can add a weight-ring in the tire to lower the overall center of gravity. Make it the same as a real camper trailer.



⚠ 警告 WARNING

套件内用于包装的塑料袋使用后请及时收好，或者丢弃在可回收垃圾桶内。请勿让儿童当做玩具，可能会导致窒息危险！
The plastic bag of kits, after using please promptly put away or throws into the recyclable rubbish bin, if get by child, might have choking hazard!

⚠ 注意 CAUTIONS

模型内含有微型连接件及外观仿真件，请防止高空坠落或挤压模型。这将可能损坏微型部件及外观零件！请勿将模型长时间放置于阳光下，这将可能加速塑料及橡胶的老化！
Since the model have the mini connection parts and simulation parts inside, please avoid the model be altitude fall or squeezed, otherwise, it will cause the damage of mini connection parts and simulation parts! Please do not put the model in the sun at long time, otherwise, it will accelerate aging of the plastic and rubber parts!


⚠ 警告 WARNING

本套件不适合14岁以下使用！
The kits is not suitable for children under 14 years old!



套件内含大量微小零件，若儿童吸入或误食，可能会导致窒息等危险！请务必放置于儿童不易接触的地方！

This kit includes small parts which could potentially be hazardous when inhaled or eaten. Please be sure put the model at the place where child can not touch it!

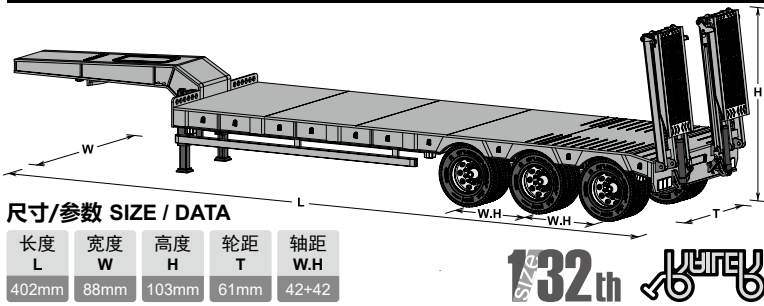

尺寸/参数 SIZE / DATA

长度 L	宽度 W	高度 H	轮距 T	轴距 W.H
402mm	88mm	103mm	61mm	42+42

⚠ 提示 TIPS

在开始组装前，请先准备好所需要用到的工具，按照说明书左侧提示打开相对应的包裹（不要将所有零件包全部打开或全部取出，以免弄混或者丢失），取出相对应的零件（只需要取出左侧标注的零件数量）。因个别零件尺寸比较小，特别是螺丝等小零件，非常容易丢失，使用小盘子、小盒子等来放置待组装的小零件，能有效防止其丢失。
取出零件后如发现毛刺或飞边的，请先用美工刀进行修整，再用砂纸打磨光洁后再进行组装。进行这一步骤后将对组装完成后运行的流畅性和美观性有进一步提升。
组装小零件时注意控制力度，以免损坏零件或使零件掉落而丢失。

Before assembling, please according the instructions tips to open and take out corresponding package, ready for all the tool you need (please not open all the package, it will cause the parts lost or confused). Because some spare parts are really very small, especially the screw etc., which is easily missing, you can put them into a small dish or box first to avoid missing.

Before assembling check the spare parts first, if any burr found, please use utility knife to make it flat, and then use sandpaper to make it smooth. After doing this the fluency and aesthetics of the model will be upgraded.

During assembling the spare parts, please do not use over strength or else will cause the spare parts break or drop.

部件/编号对照 PARTS / REFERENCE NUMBER

以下为 奥兰多汉特 无动力拖车系列 **OH32No2 KT** 【低台平板拖车】模型包含的所有零部件编号及数量对照表。


如组装或者使用过程中损坏或者丢失其中一些部件，可按照零部件编号购买相应的零部件用以替换。

如需要对模型进行改装及加装，也可按照所需要改装或加装的零部件的编号进行购买。

Following is the comparison table of all spare parts and numbers of the **ORLANDOO - HUNTER** TRAILER Series **OH32No2 KT** Model.


During the assembling, if some spare parts break or lost, you can according the number in the chart to buy a new one to replace it.

If need remodel or adding, also can according the chart to buy some additional spare parts.


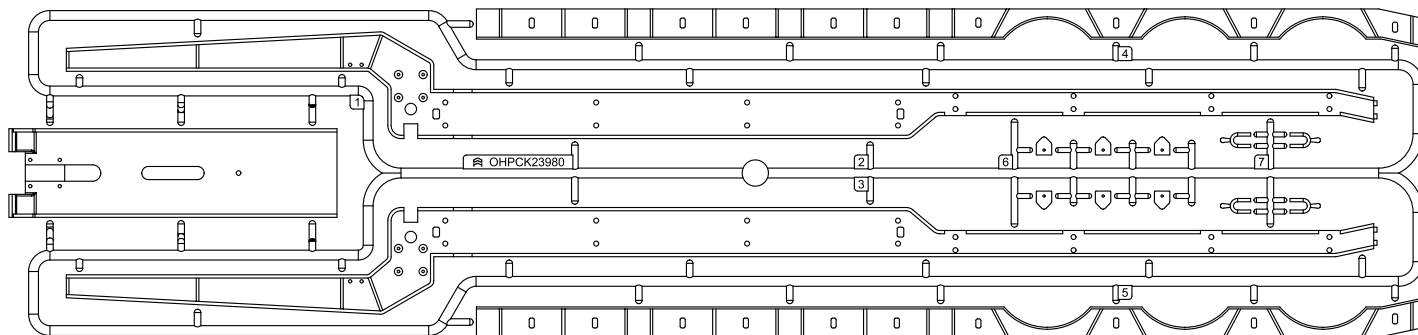



1X OHPCCK23980

1X OHPCCK00880

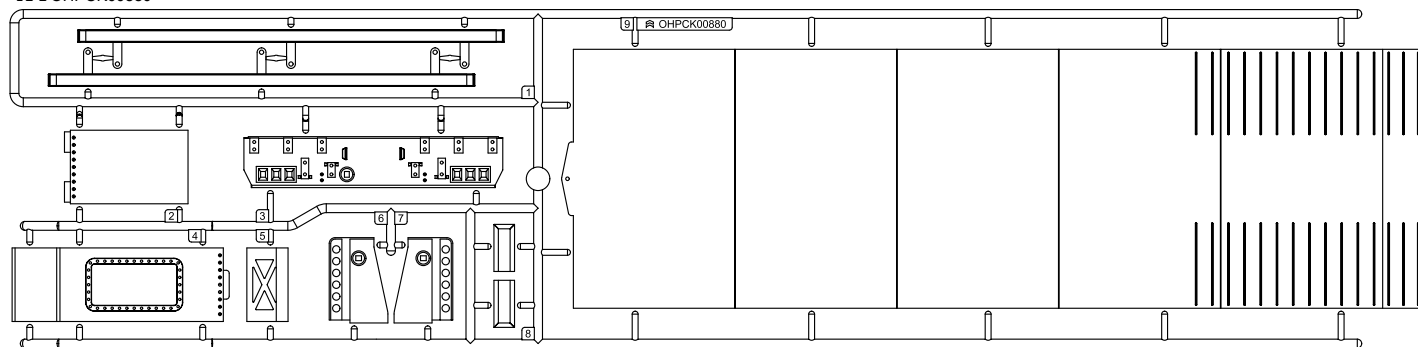


OH32No2 KT

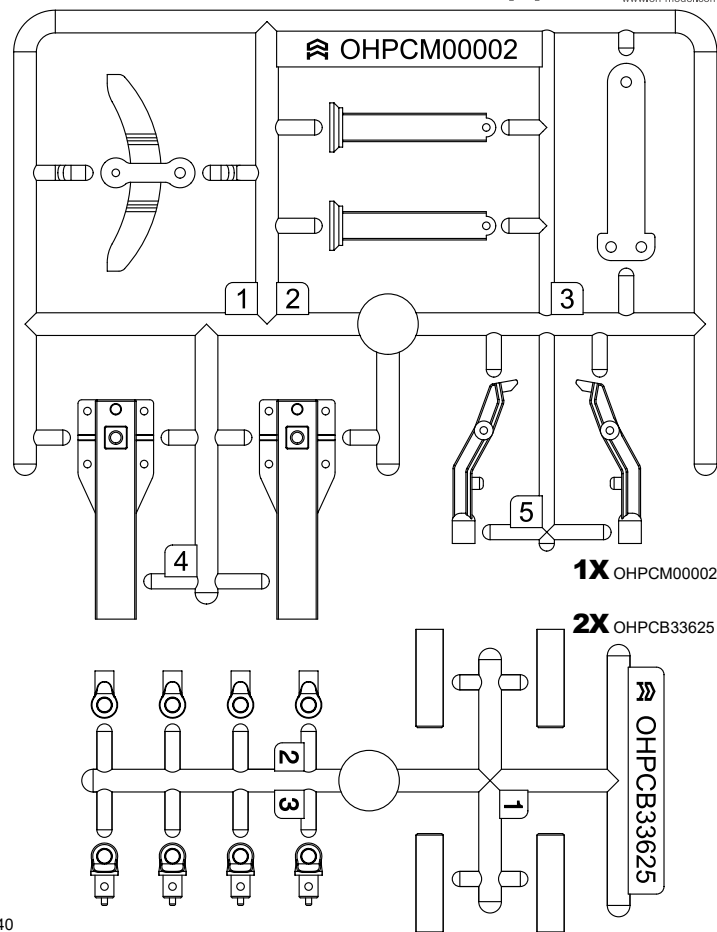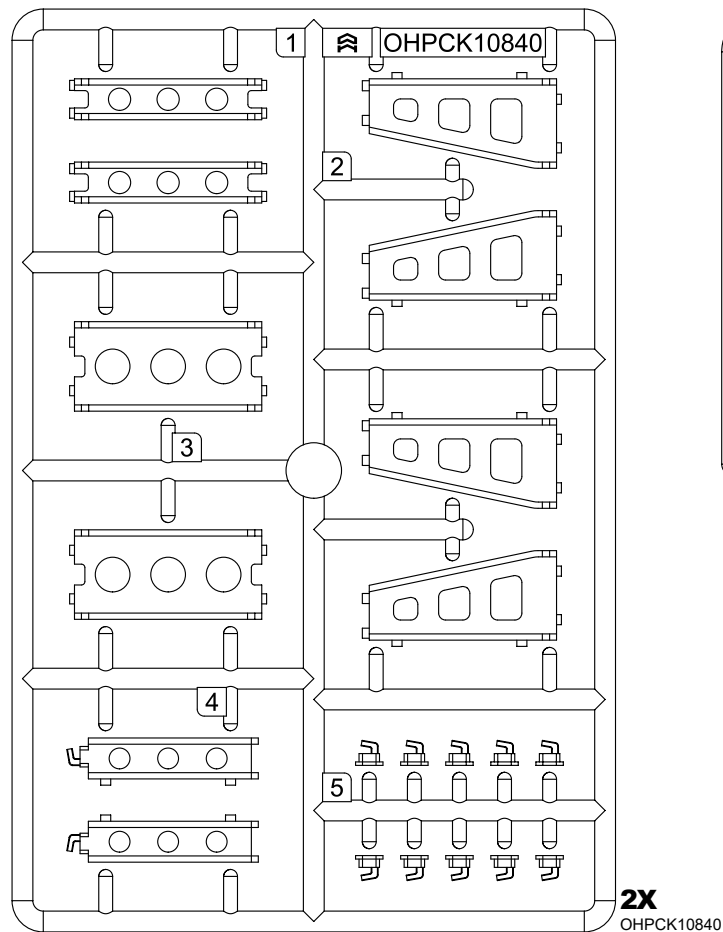

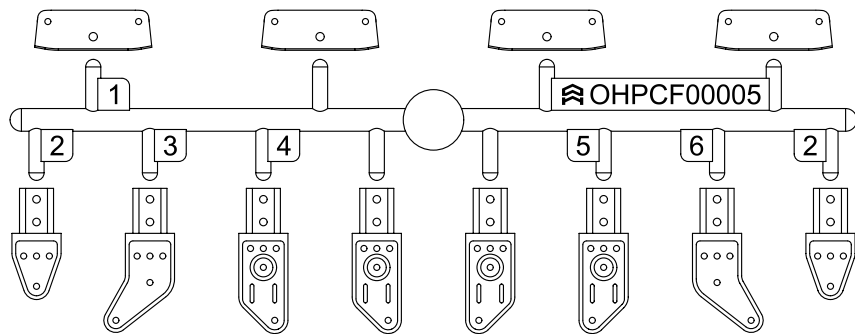


1X OHPCF00005



2X OHPCM00003

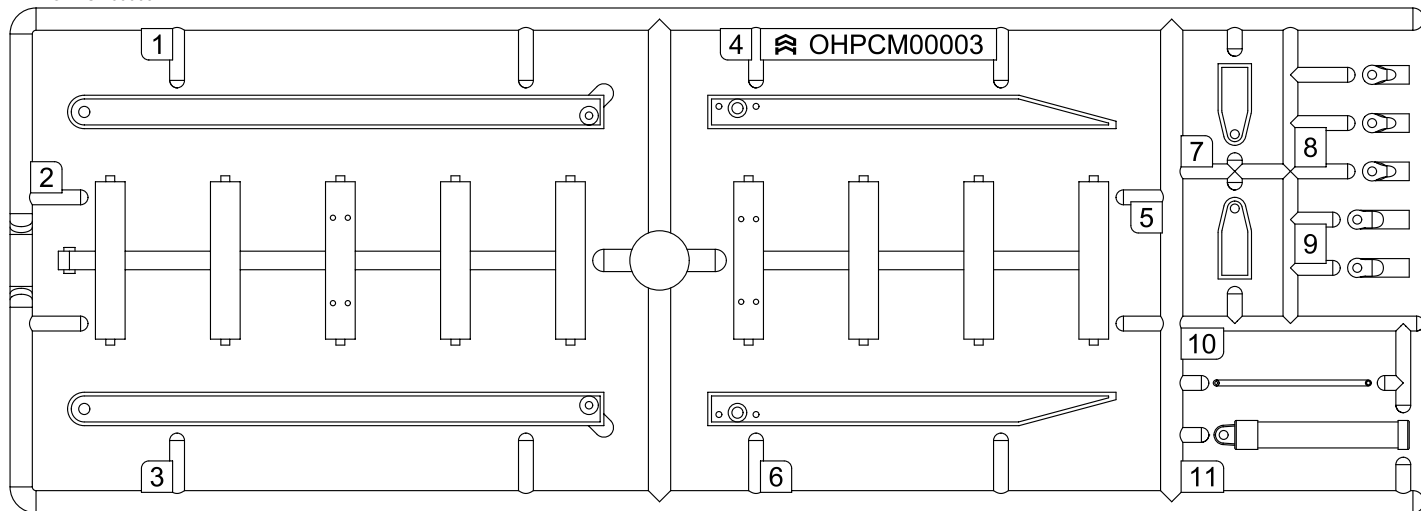

OH32No2 KIT

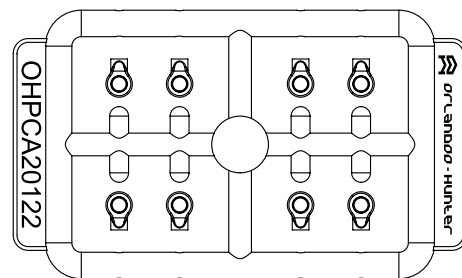


1X OHPCA20122

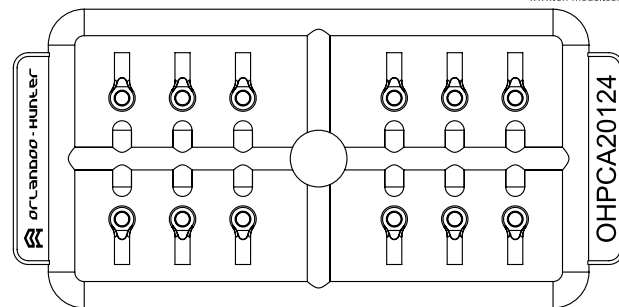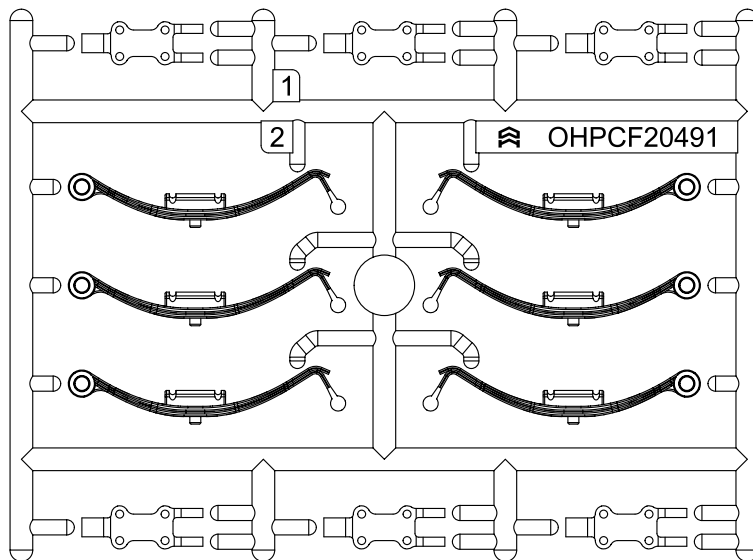





2X OHPCA20124

1X
OHPCF20491

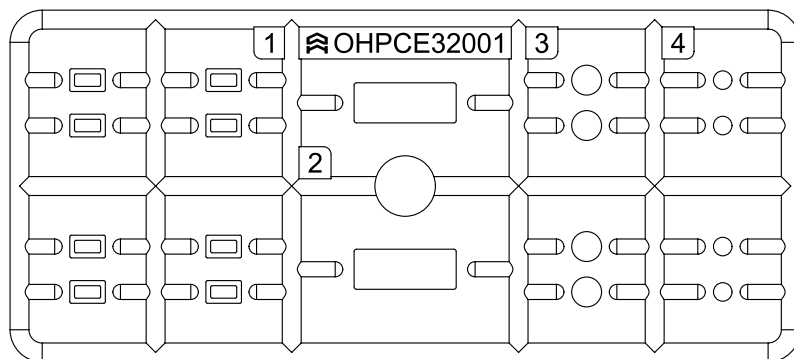

1X
OHPCE32001

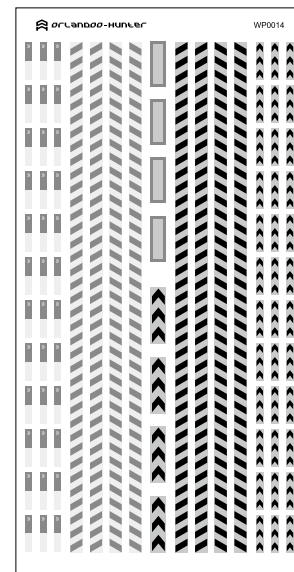


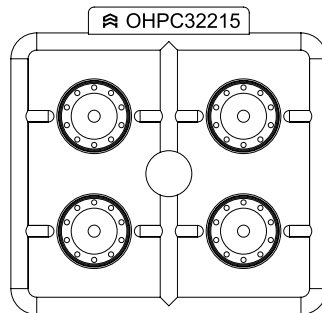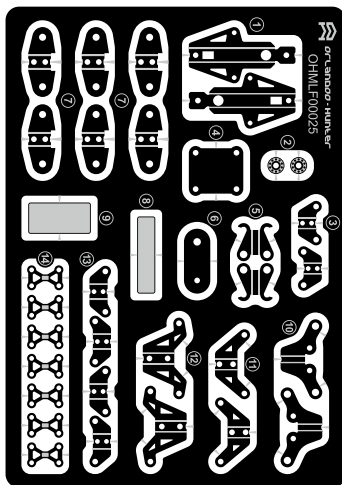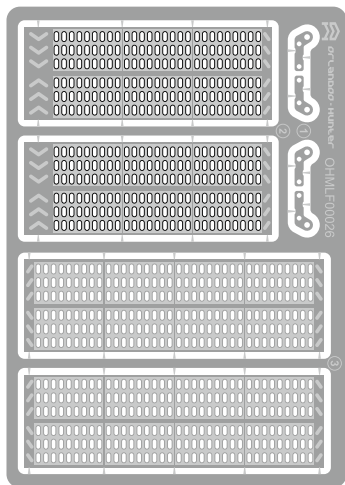

2X OHPC32215



1X
OHPJX08010

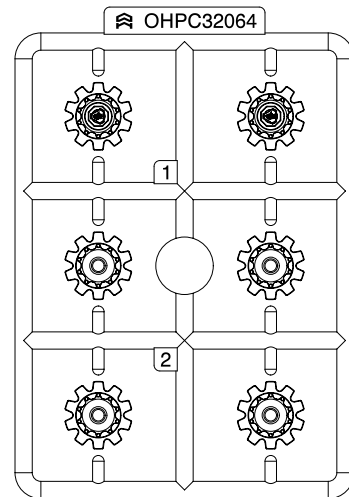

2X OHPC32064



2X
OHSGA01502



6X
OHMLC20011



4X
OHTLC00002



2X
OHSGB22728



1X
OHSW62532



6X
OHBG10310



6X
OHSGA11501




12X
OHMLB31013



6X
OHBG30620

OH32No2 KIT

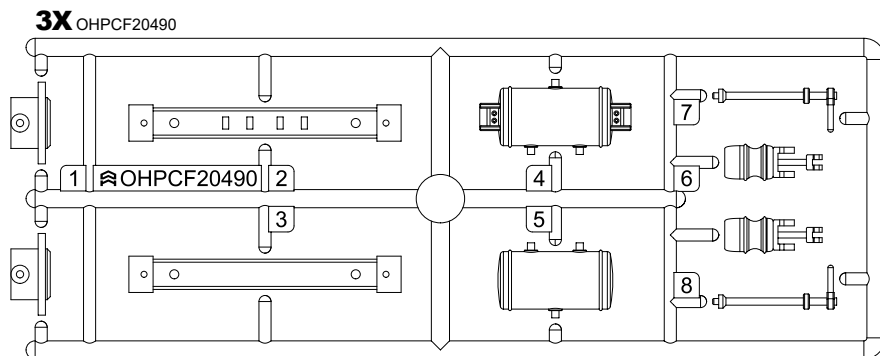

3X OHPCF20490

2X OHMLB01262

1X OHMLB01215

6X OHMLB01208

2X OHMLB01206

2X OHMLD32022

16X
OHMLA20162

16X
OHMLA20260

4X
OHMLA20400

4X
OHSW61516

84X
OHSW90103

6X
OHSW90102

6X OHMLD02006

20X
OHSW01002

8X
OHSW01004

11X
OHSW01202

38X
OHSW01203


1X
OHSW01205

22X
OHSW11005


68X
OHSW11007

2X
OHSW11203

1X
OHTLB10021




1X
OHTLB32001

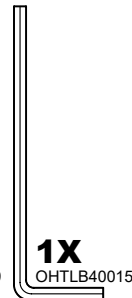

工具包内包含 TOOL CONTENTS

十字螺丝刀
六角锁胎器
内六角扳手
外六角扳手
双面减震垫

Phillips Screwdriver
Nut Driver
"L" Type Hexagon Screwdriver
Open End Wrenches
Double Side Tape



以下图标将会出现在接下来的装配图中，请先了解图标的含义！
 Following Icon will appear on the assembling chart, please understanding its meaning first!

2X
制作两份
Make
Two Copies

4X
制作四份
Make
Four Copies

6X
制作六份
Make
Six Copies

11X
制作十一份
Make
Eleven Copies

需上色
Requiring Color

流缝胶
Requiring
Glue

瞬干胶
CA

选择
Requiring
Select


改零件
Optional

注意
Attention



6X OHMLA20162

1

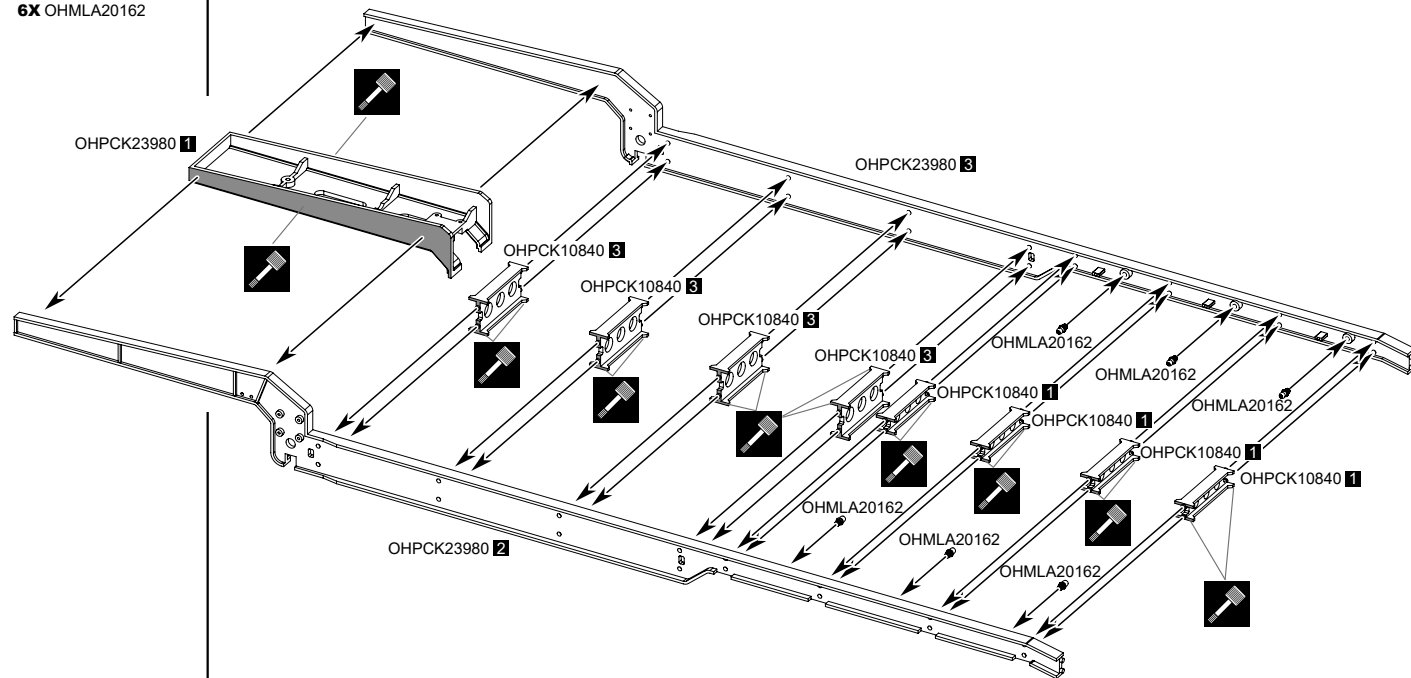

УПРАВЛЕНИЕ
ОИЗМ2 KIT

B

打开包裹“B”



4X OHMLA20162




1X OHSW62532



5X OHSW01202

2

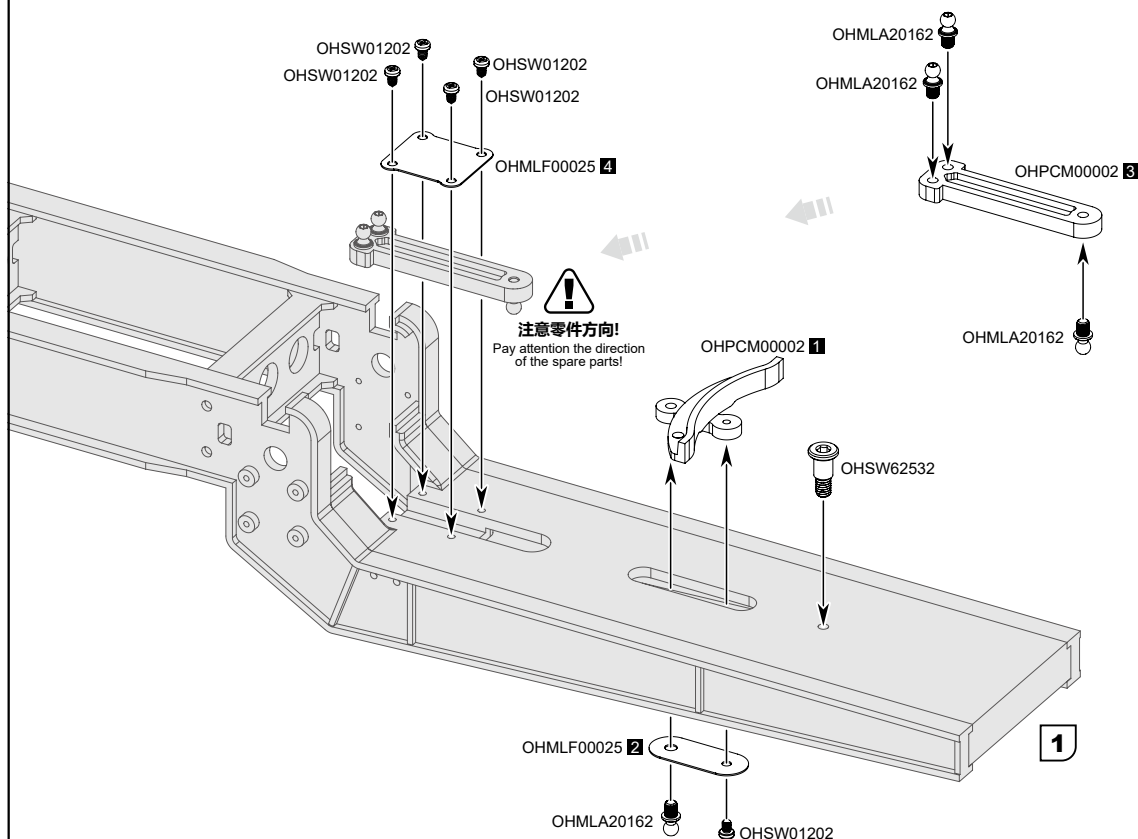



2X OHSGB22728


6X OHSW01202






2X OHWSW11203



2X OHTLC00002


3

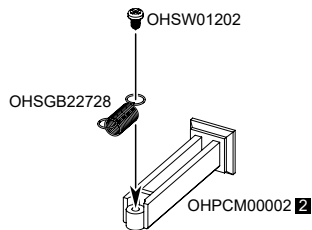


2X

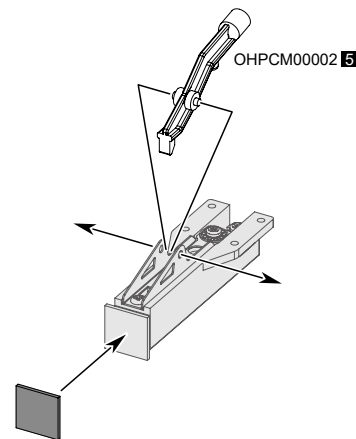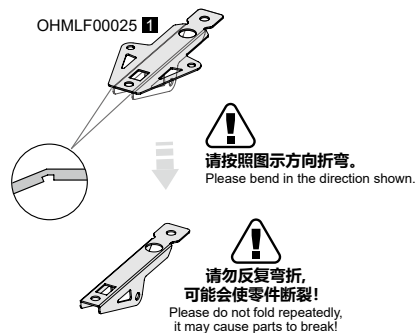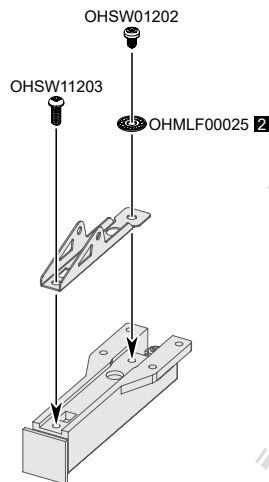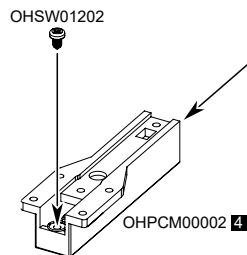

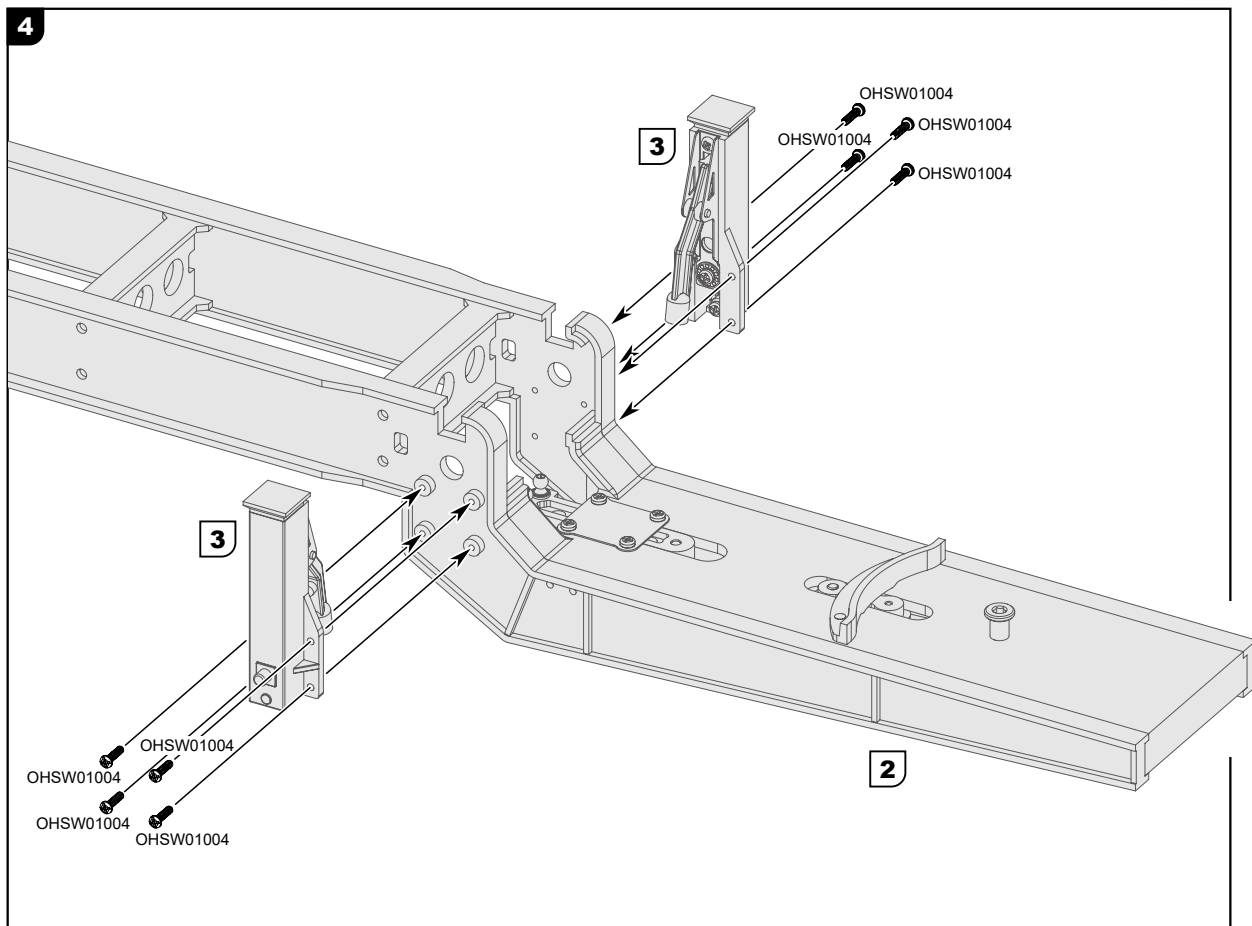

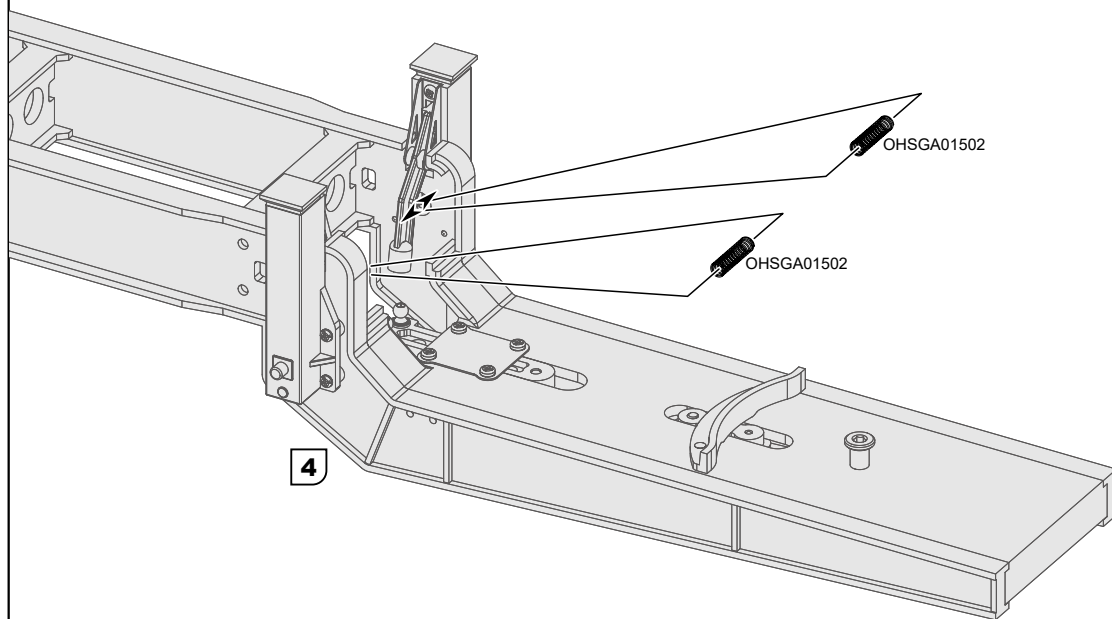


6

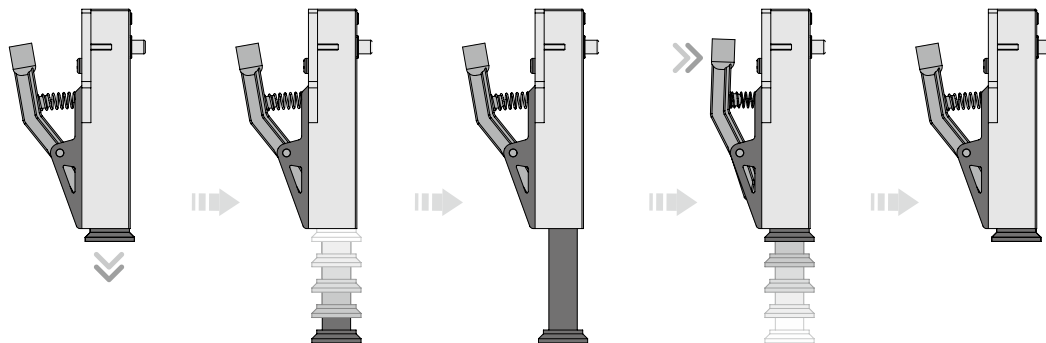

 **2X** OHMLA20260
 **2X** OHMLB01206


 **1X** OHMLB01215

7

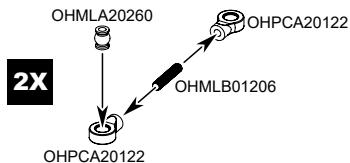

 装配后请测量平面至平面距离约为2.4mm，两端拉杆头保持平行。
After assembling, please measure the distance between planes should be about 2.4mm. Both two rod ends should keep parallel.

8

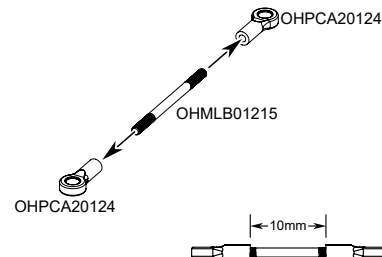

 装配后请测量平面至平面距离约为10mm，两端拉杆头保持平行。
After assembling, please measure the distance between planes should be about 10mm. Both two rod ends should keep parallel.



2X OHSW11005

9

OHSW11005

OHSW11005


8

7

7


5

10

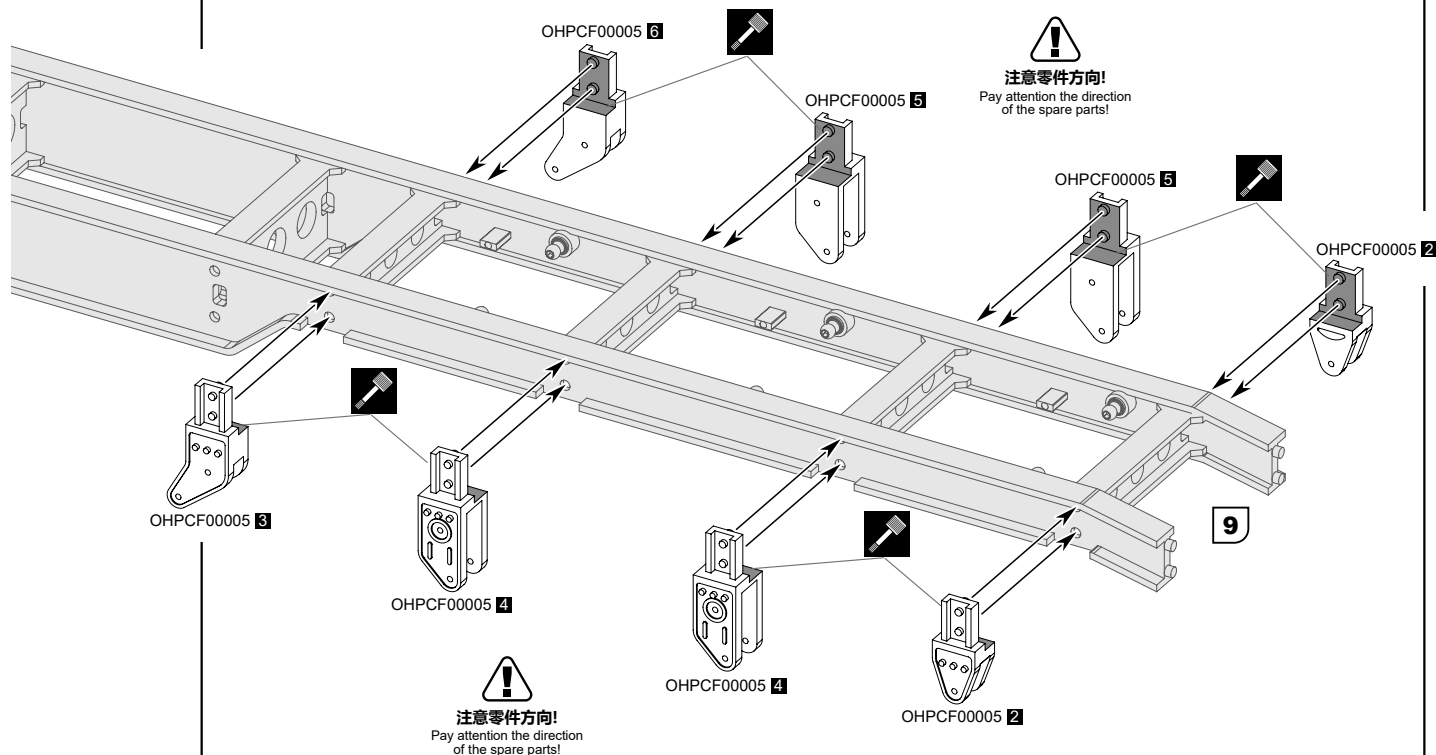



11

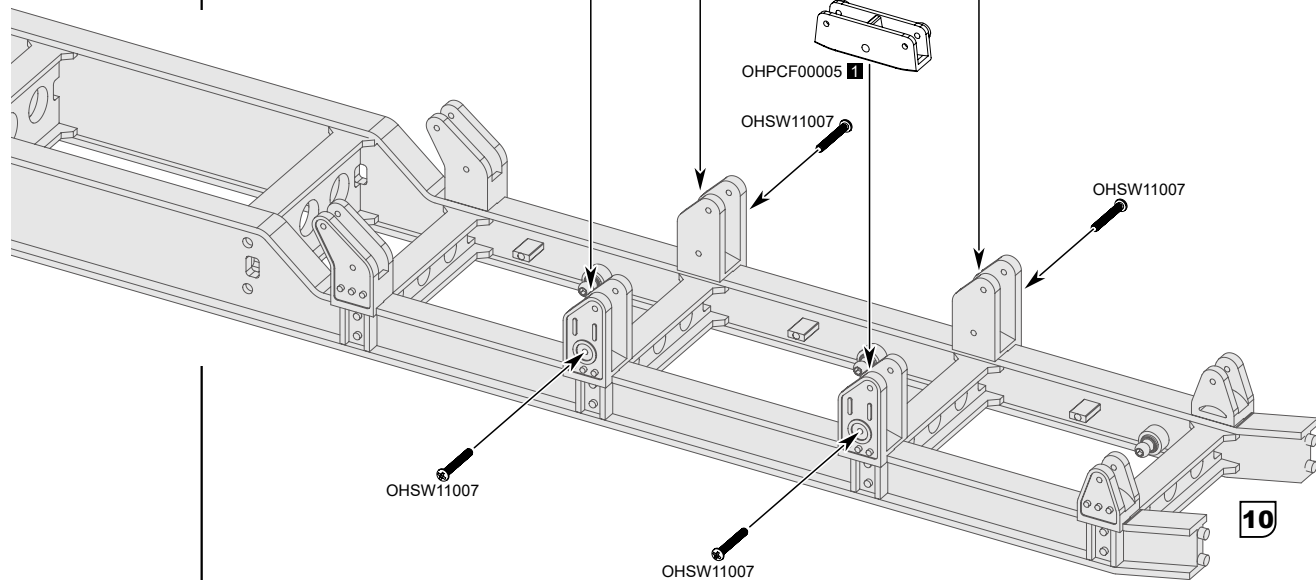

10




C
打开包裹“C”


6X OHMLC20011




6X OHBG10310


6X OHBG30620


12X OHWS01203

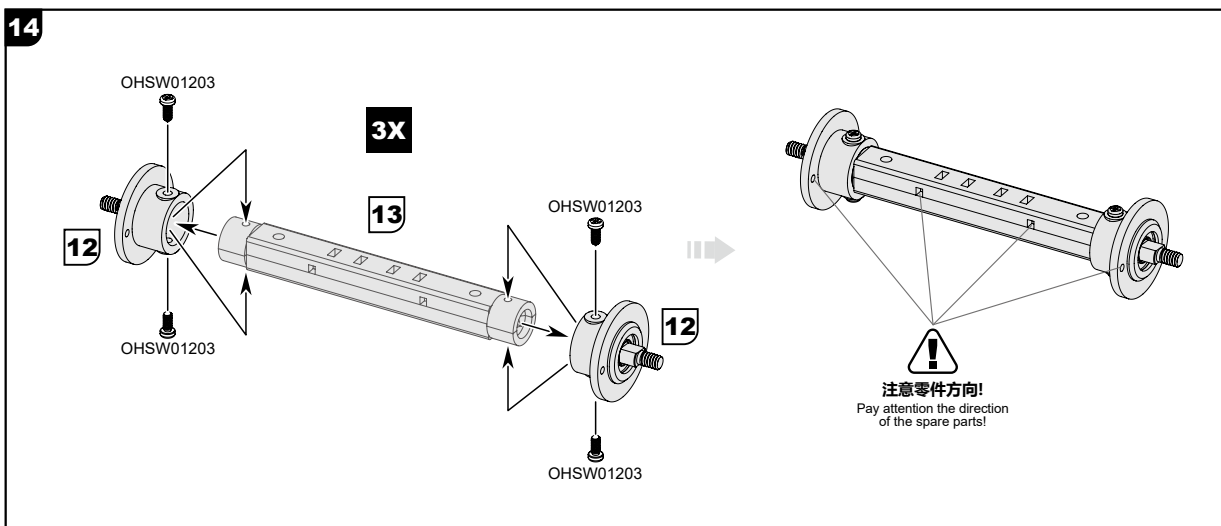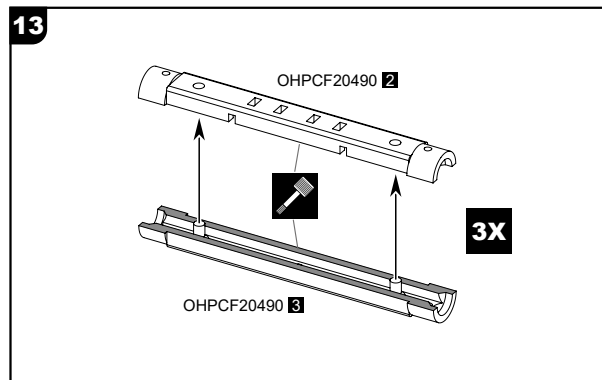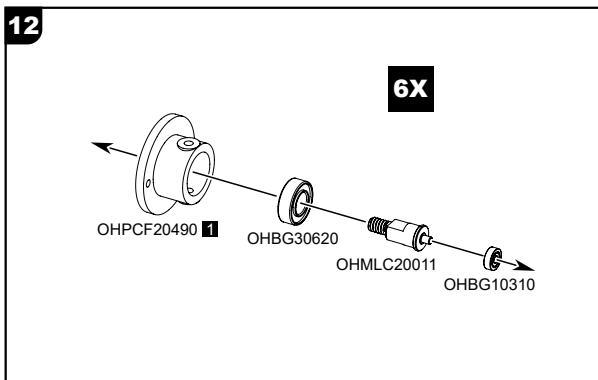



15

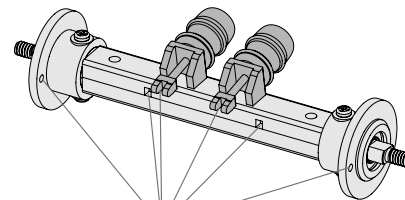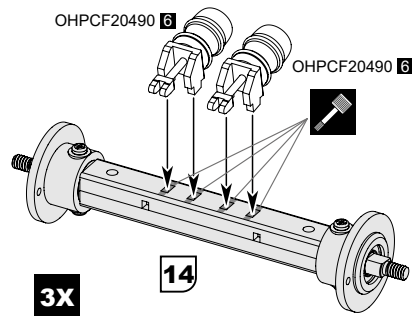

注意零件方向!
Pay attention the direction
of the spare parts!

16

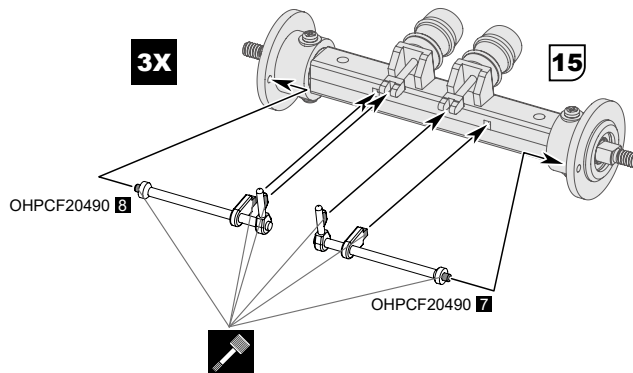






12X OHMLB31013



6X OHMLA20260

17

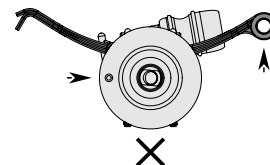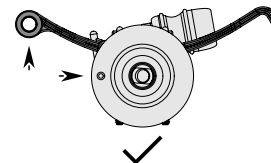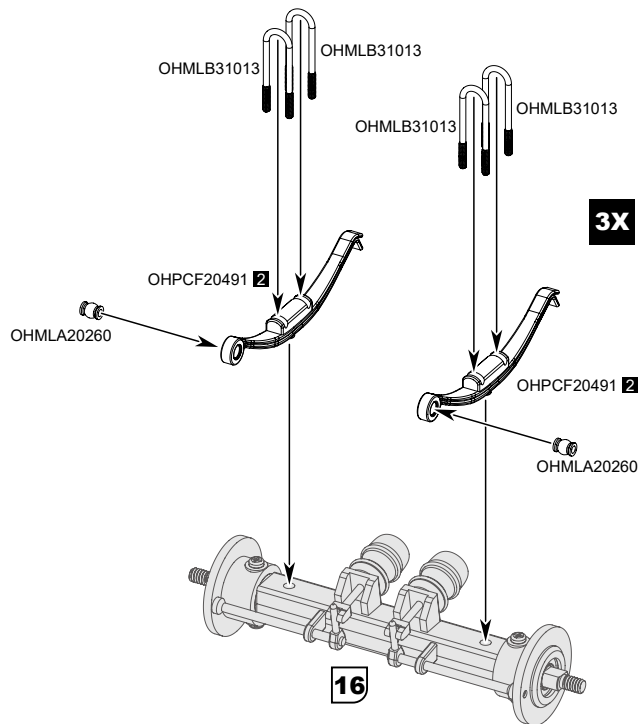

注意零件方向!
 Pay attention the direction
 of the spare parts!






6X OHMLA20162




24X OHSW90103

18

3X

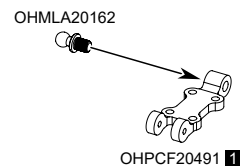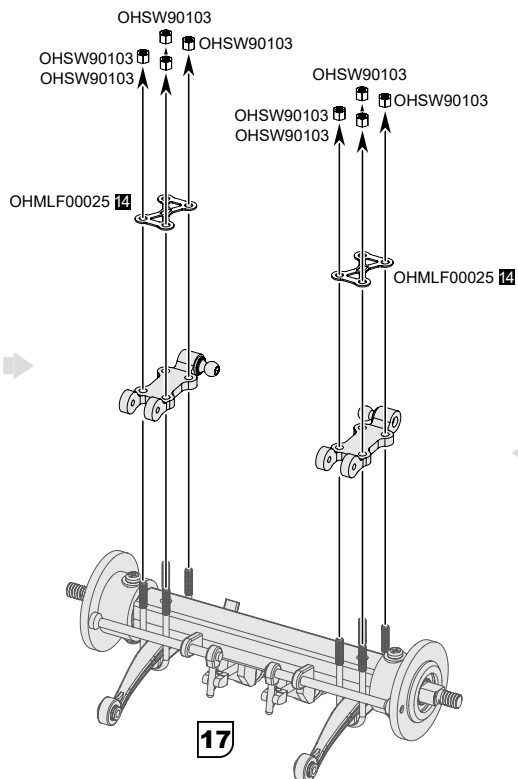

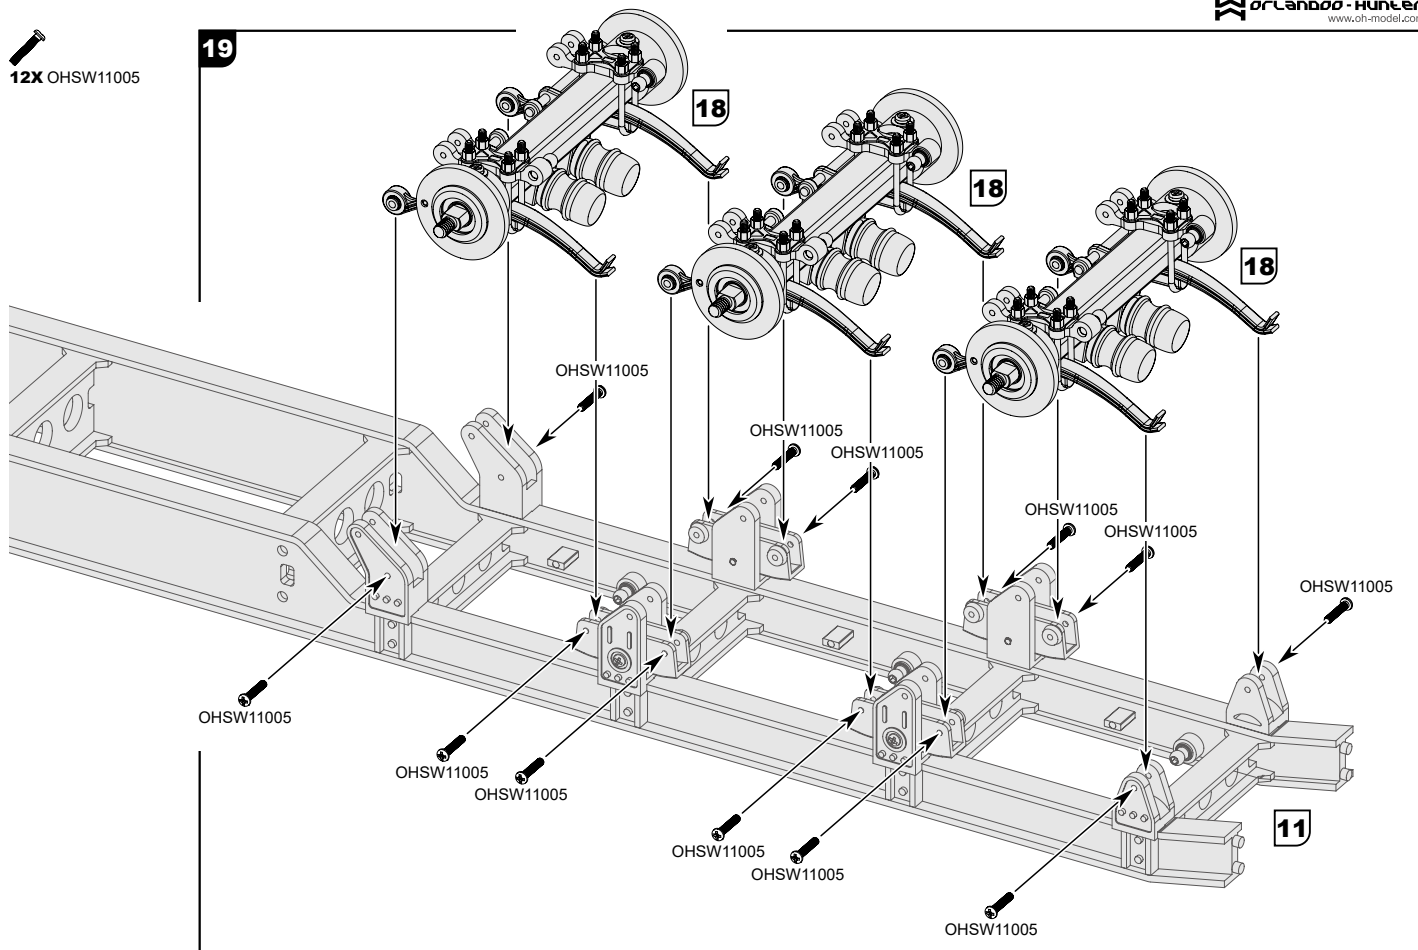




4X OHMLA20260
2X OHMLB01208

4X OHMLA20260
4X OHMLA20400
4X OHMLB01208

6X OHSGA11501
6X OHMLD02006
6X OHSW01203

UPTEV
OH32No2 KIT

20

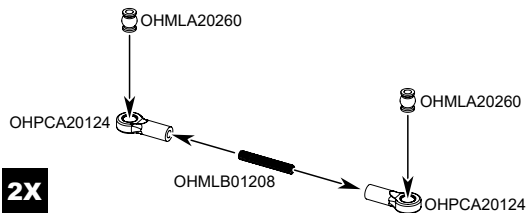


2X



装配后请测量平面至平面距离约为2.3mm，两端拉杆头保持平行。
After assembling, please measure the distance between planes should be about 2.3mm. Both two rod ends should keep parallel.

21

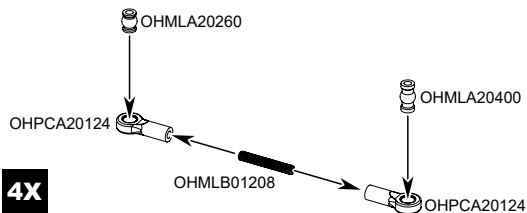


4X



装配后请测量平面至平面距离约为2.3mm，两端拉杆头保持平行。
After assembling, please measure the distance between planes should be about 2.3mm. Both two rod ends should keep parallel.



22

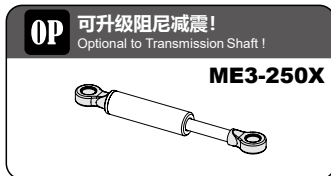

6X



ME3-250X

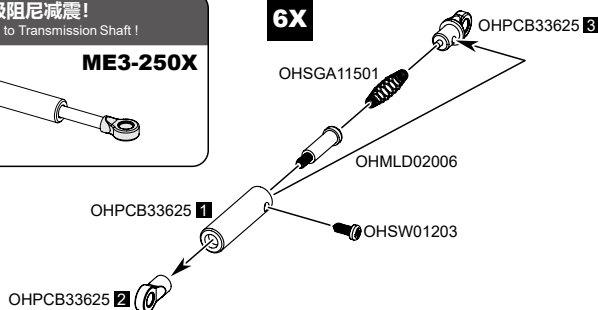


请调整减震距离约为5mm。
Please adjust the distance between shock absorber.
请使用尖嘴钳夹住丝杆再拧入减震座。
Please use Needle-nose pliers clamp to rod then twist into the shock absorber seat.


 **8X** OHSW11005

 **4X** OHSW11007


23

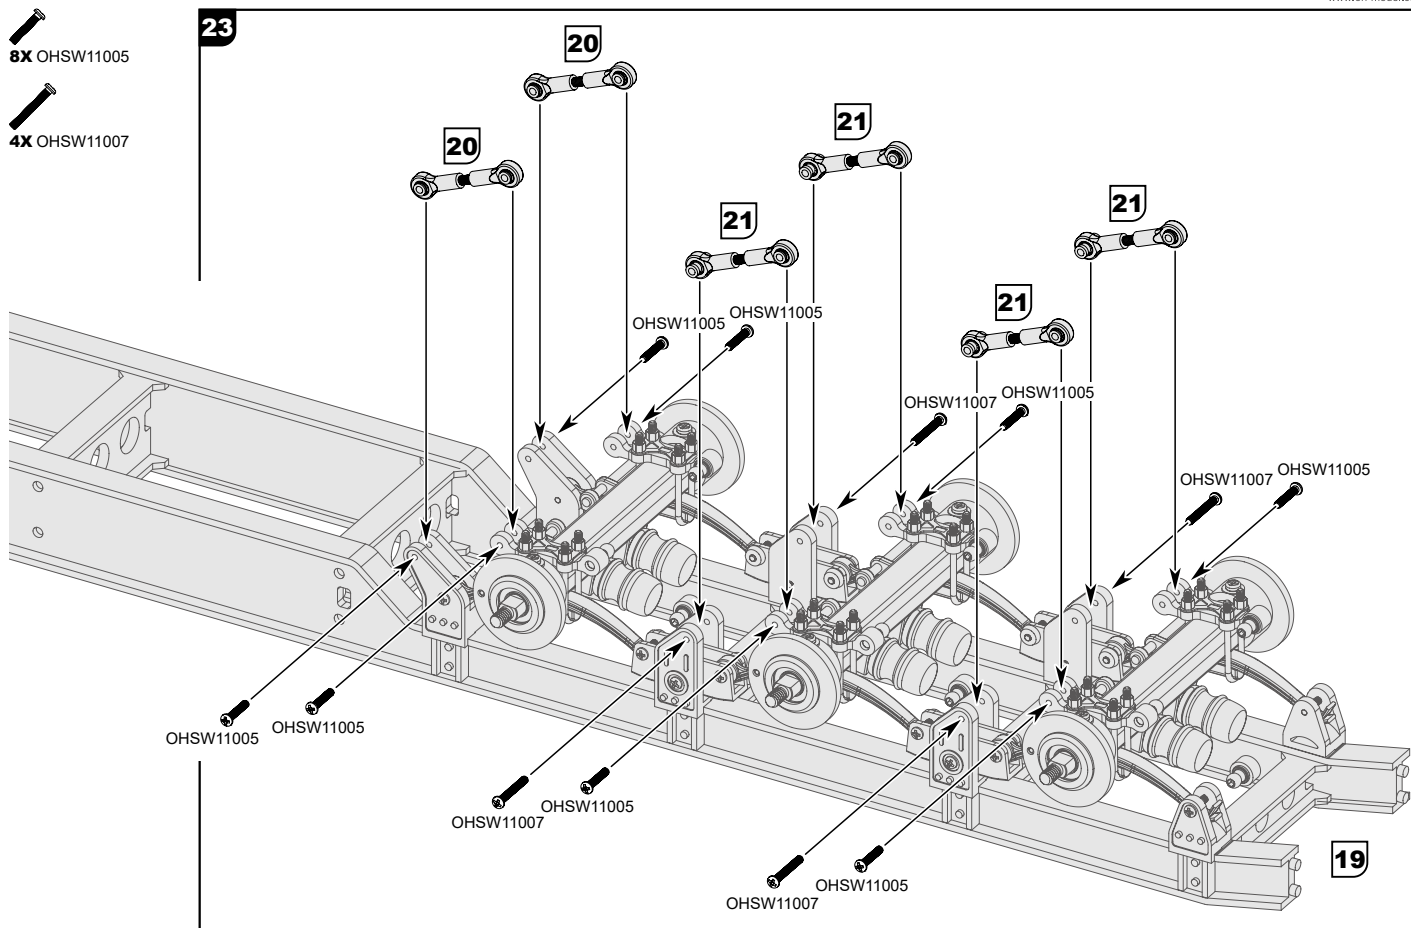


24

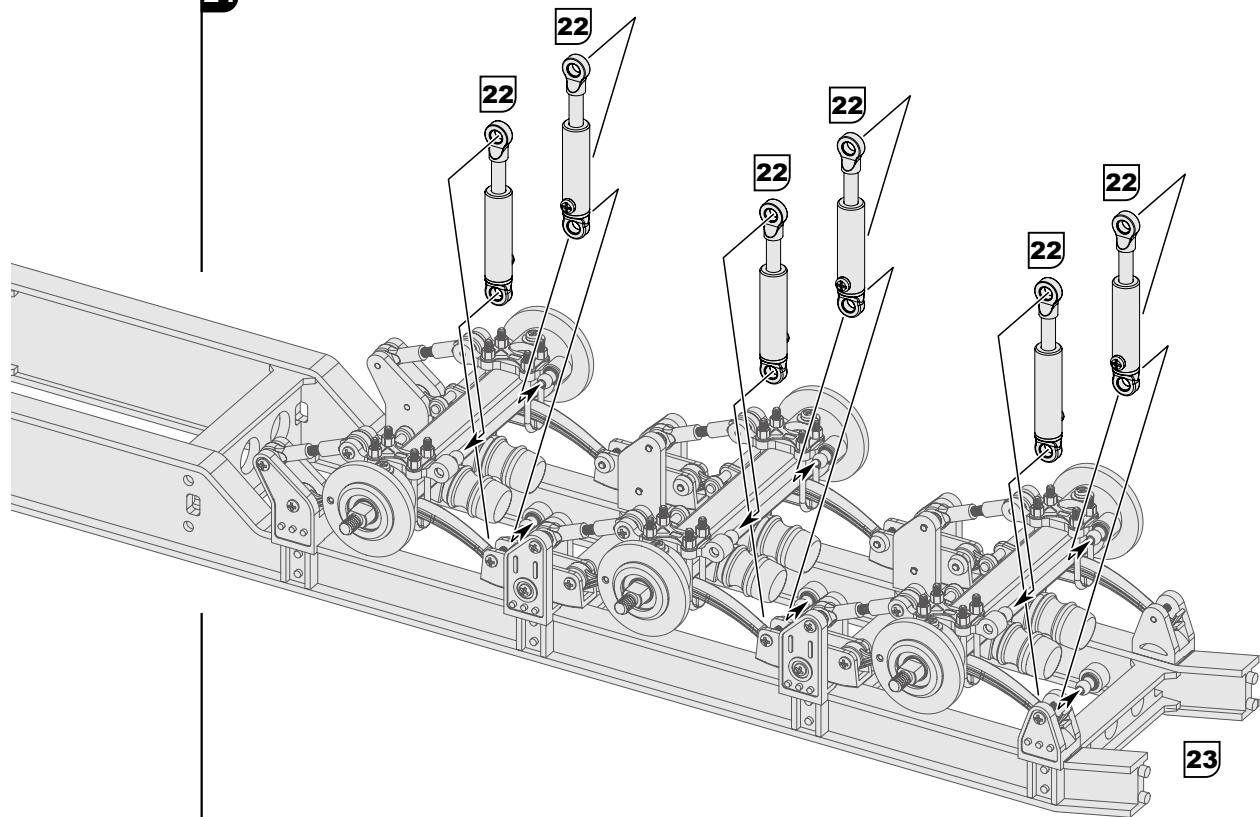

25

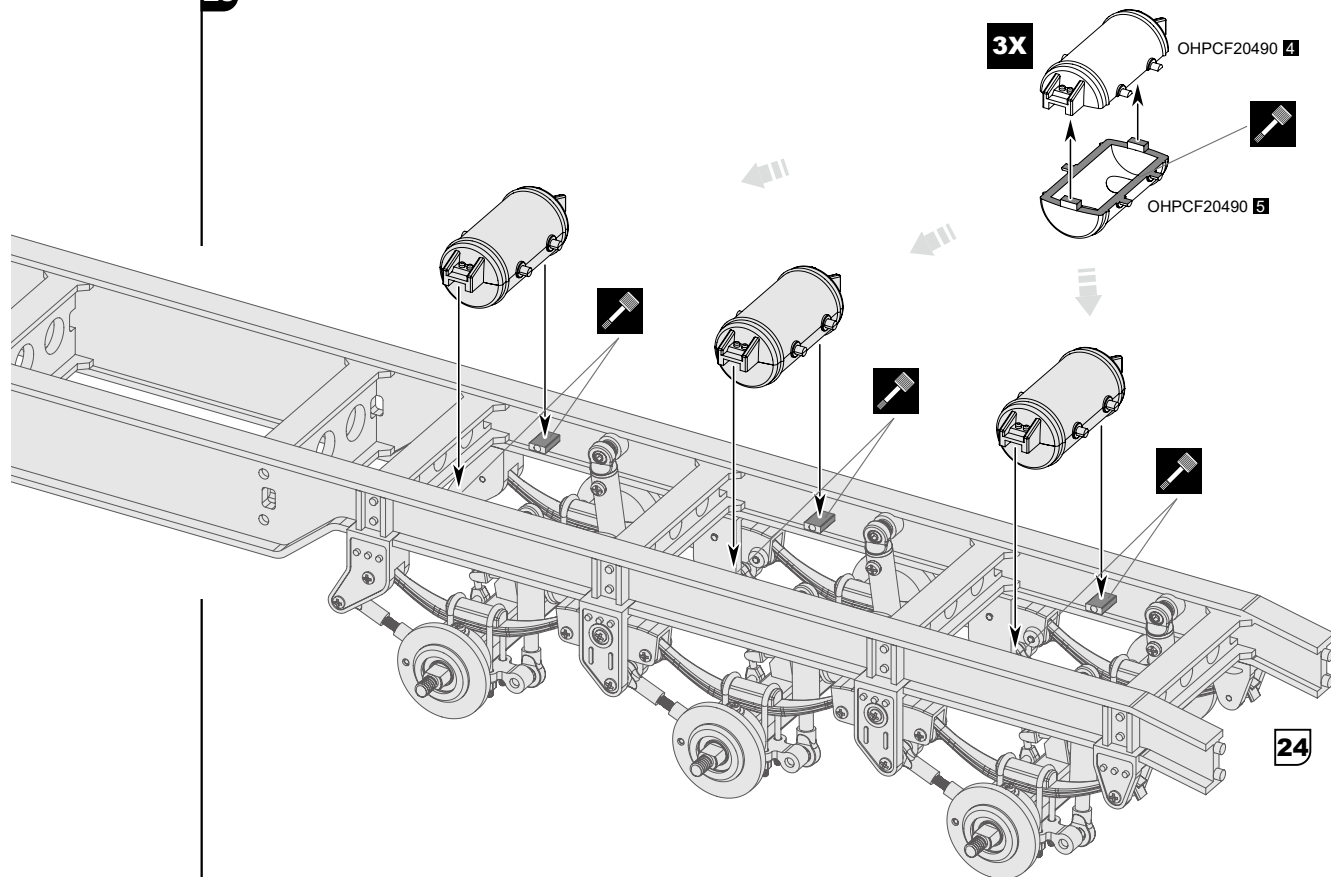


26

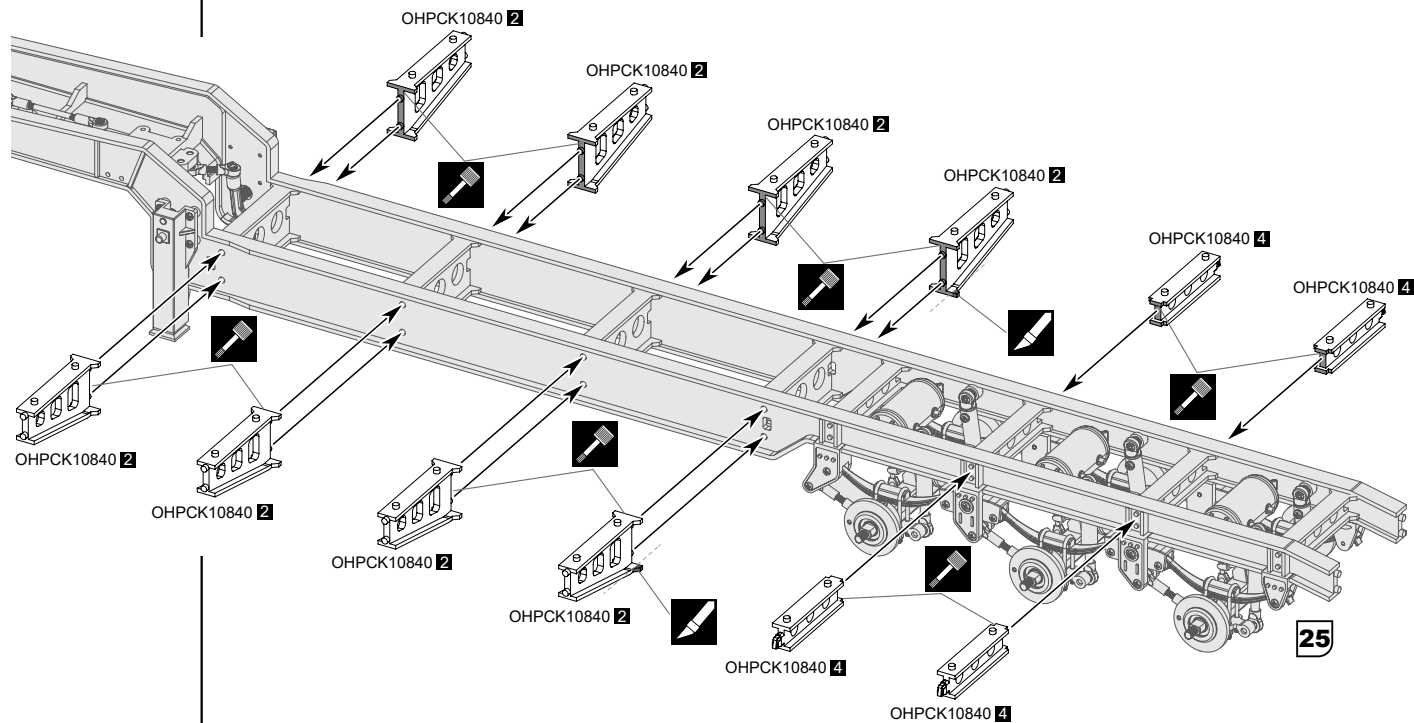

25

29

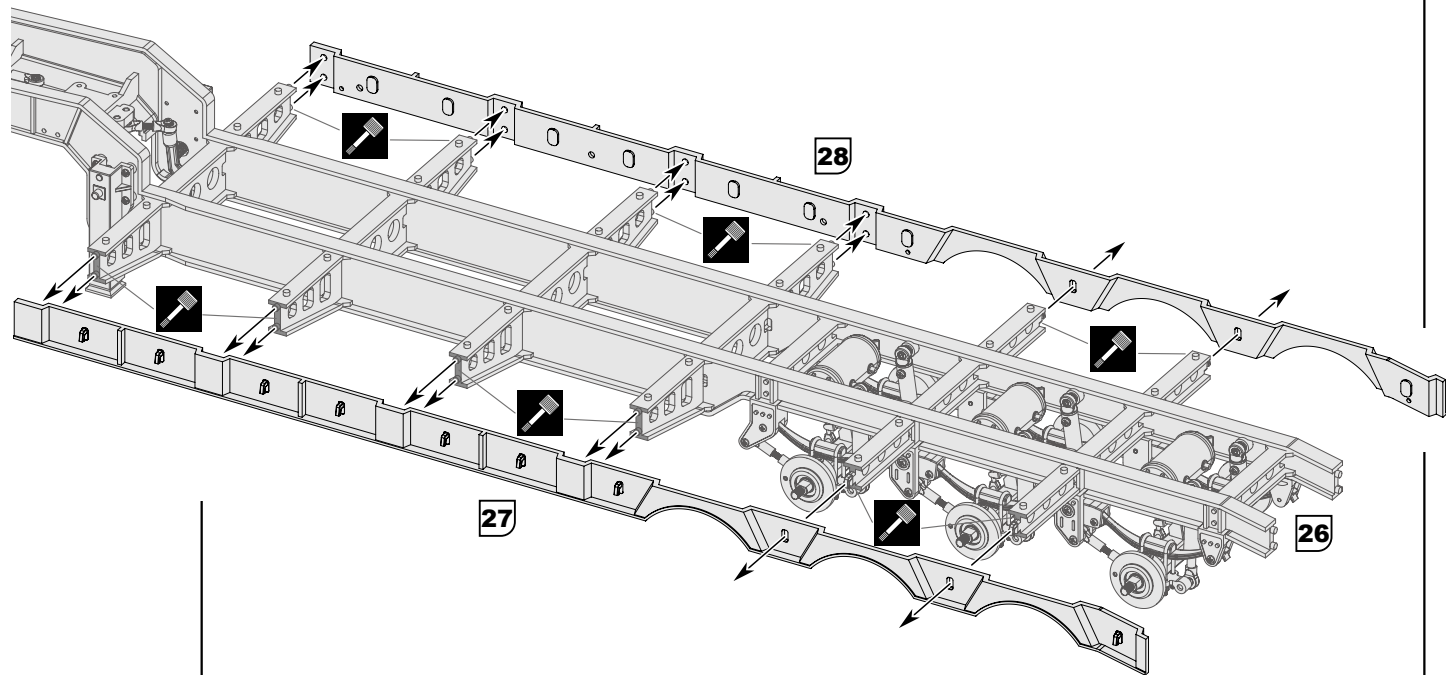

E


打开包裹'E'

30


OHPCK00880 **5**

29


OHPCK00880 **2**

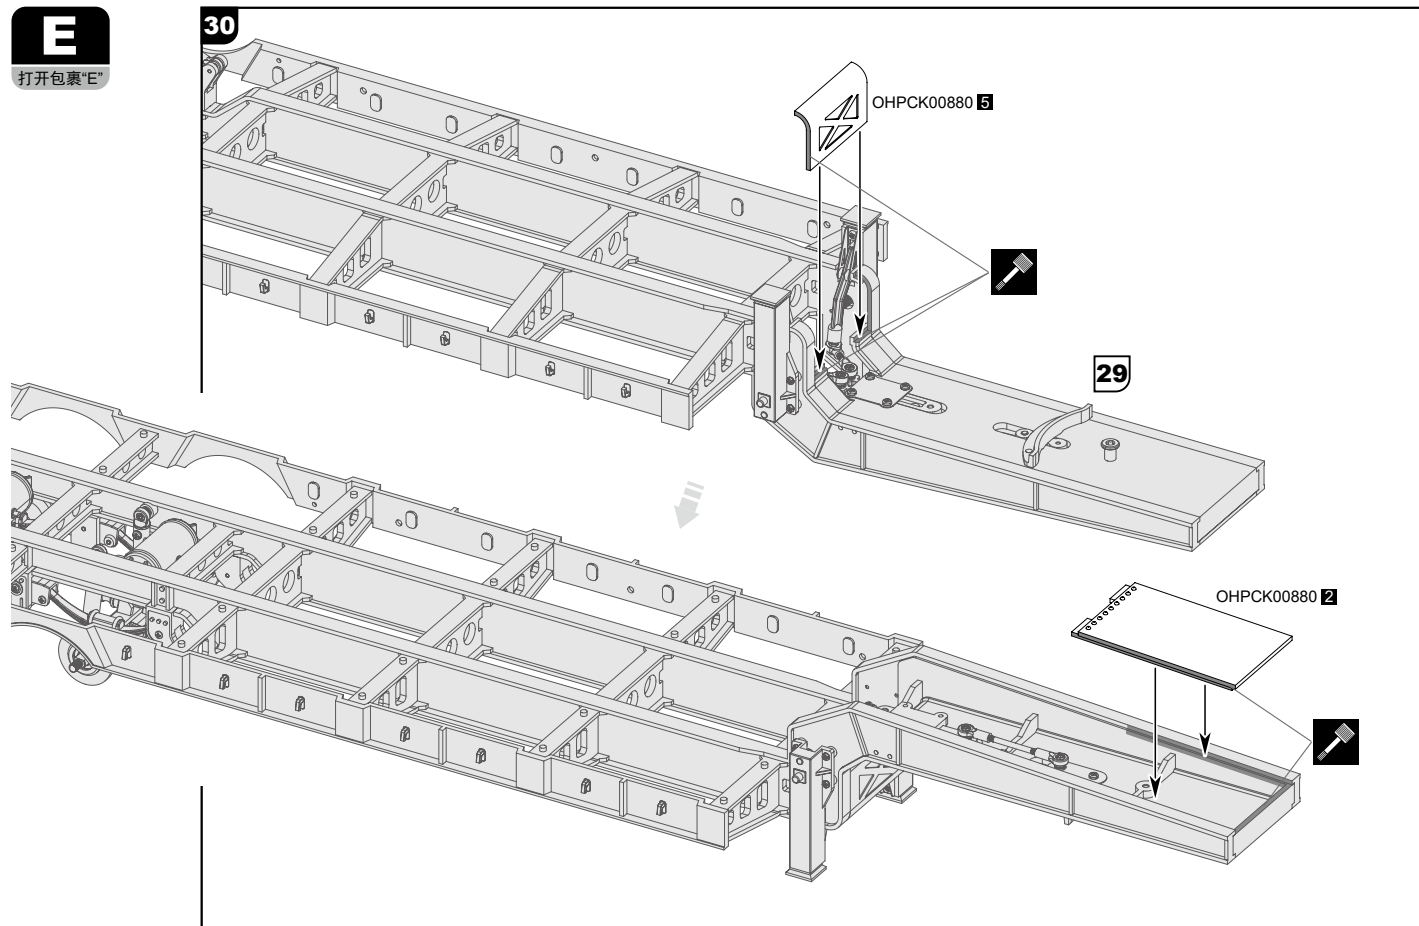

31

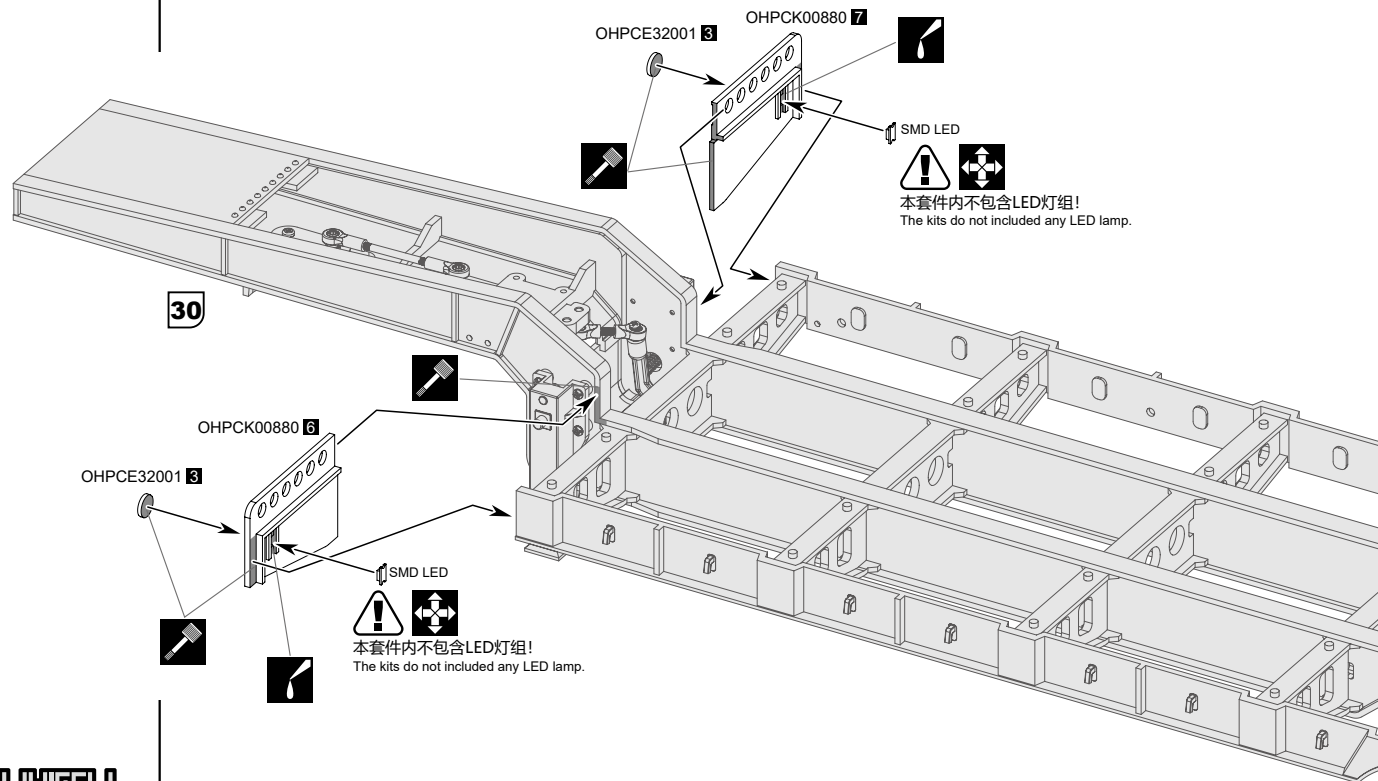


32

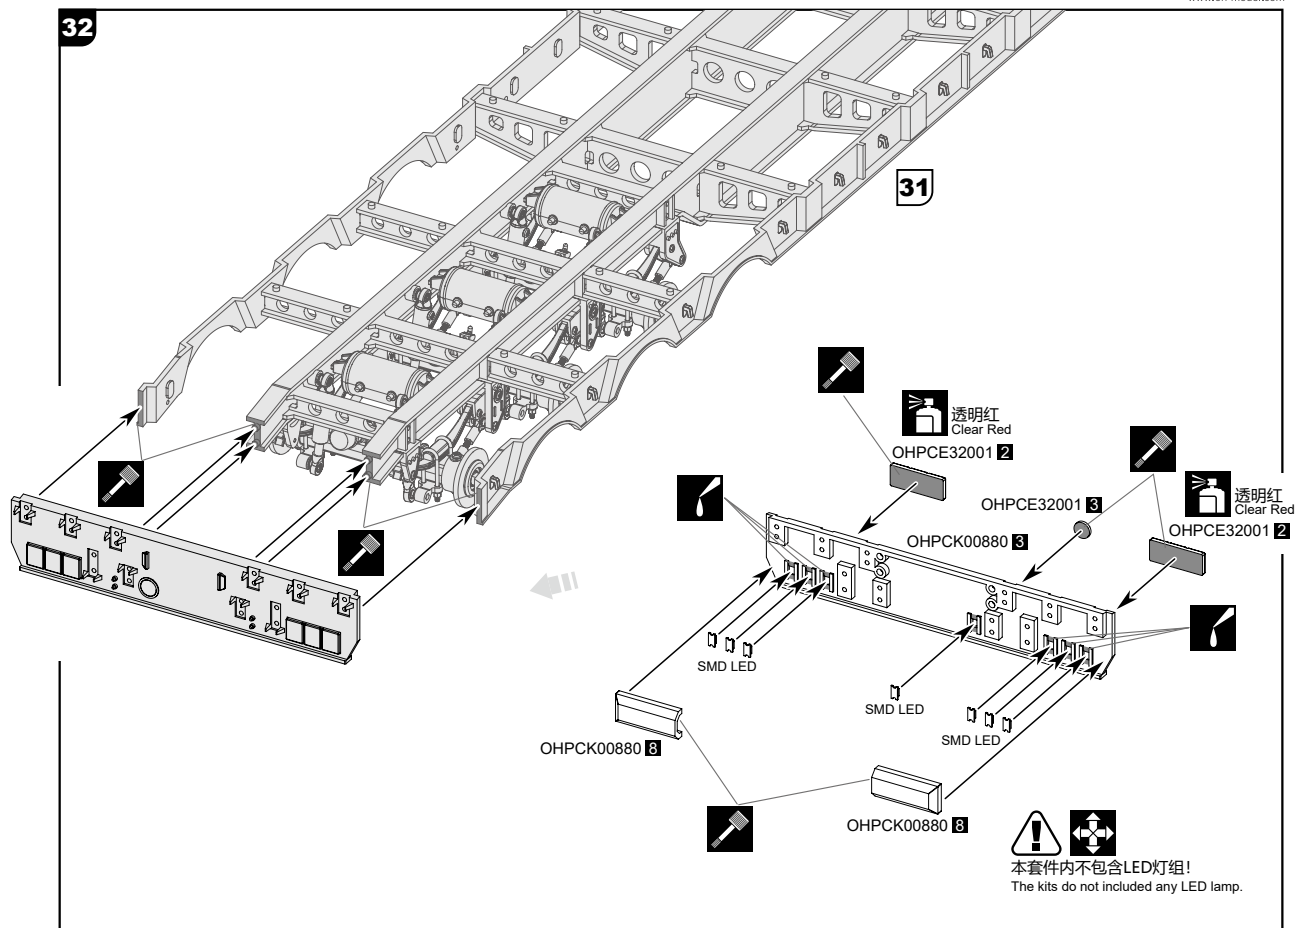


33

OHPCK00880 9

32

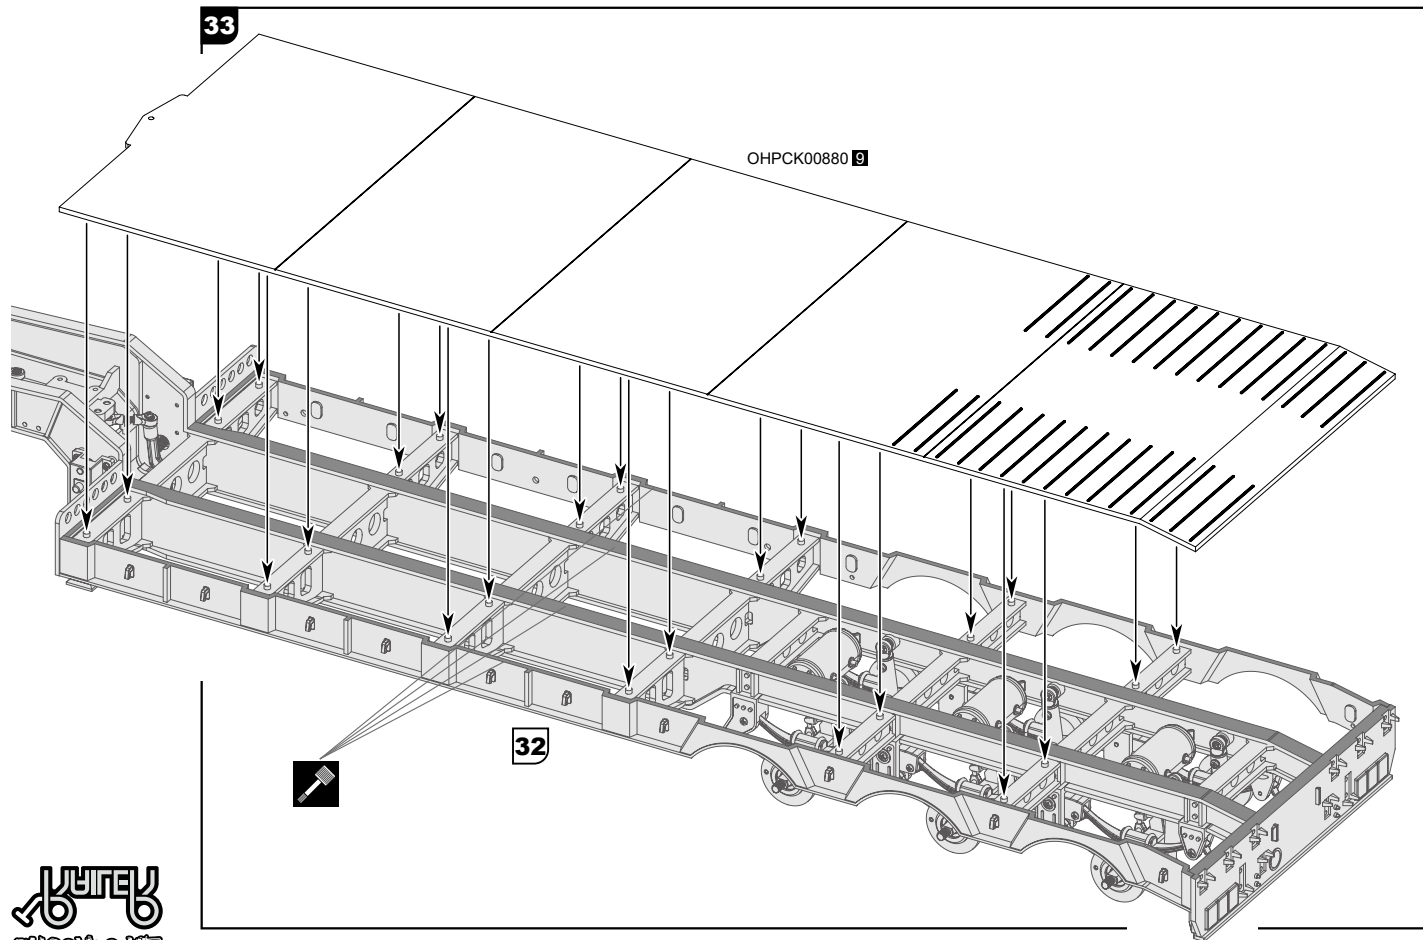


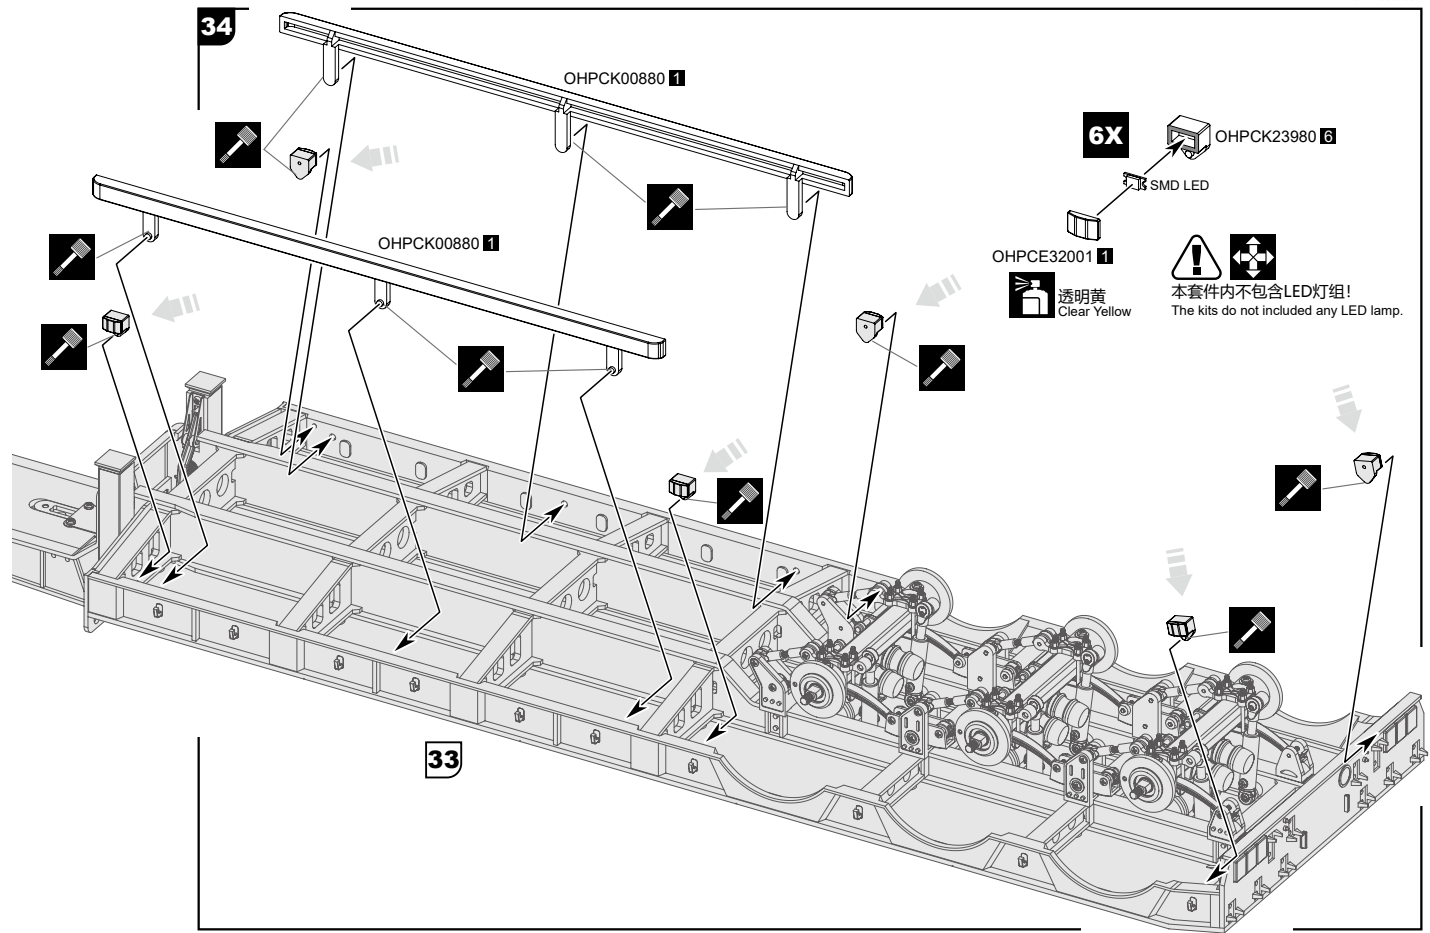


本套件内不包含LED灯组!
 The kits do not included any LED lamp.


 **1X** OHSW01205

35

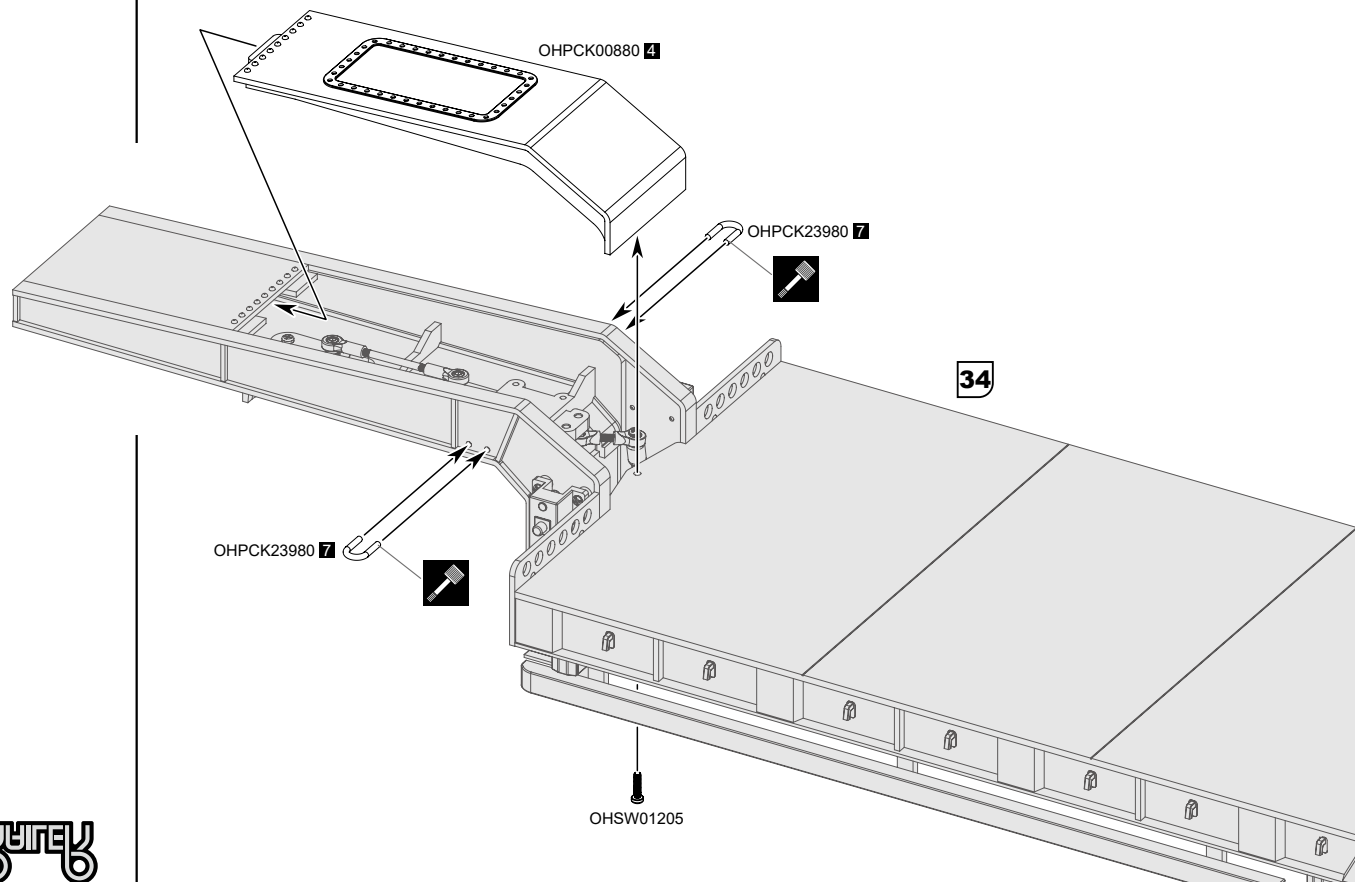








36

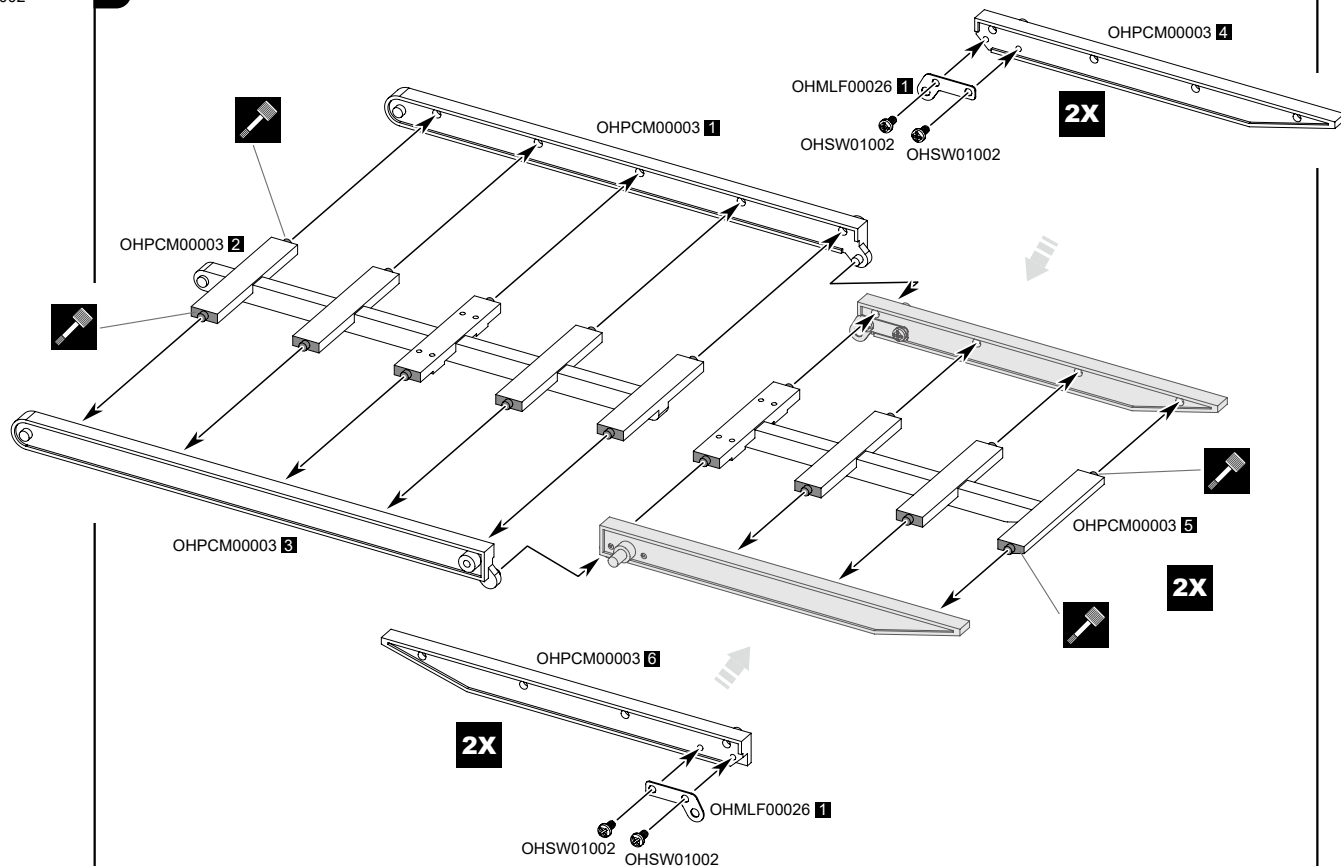

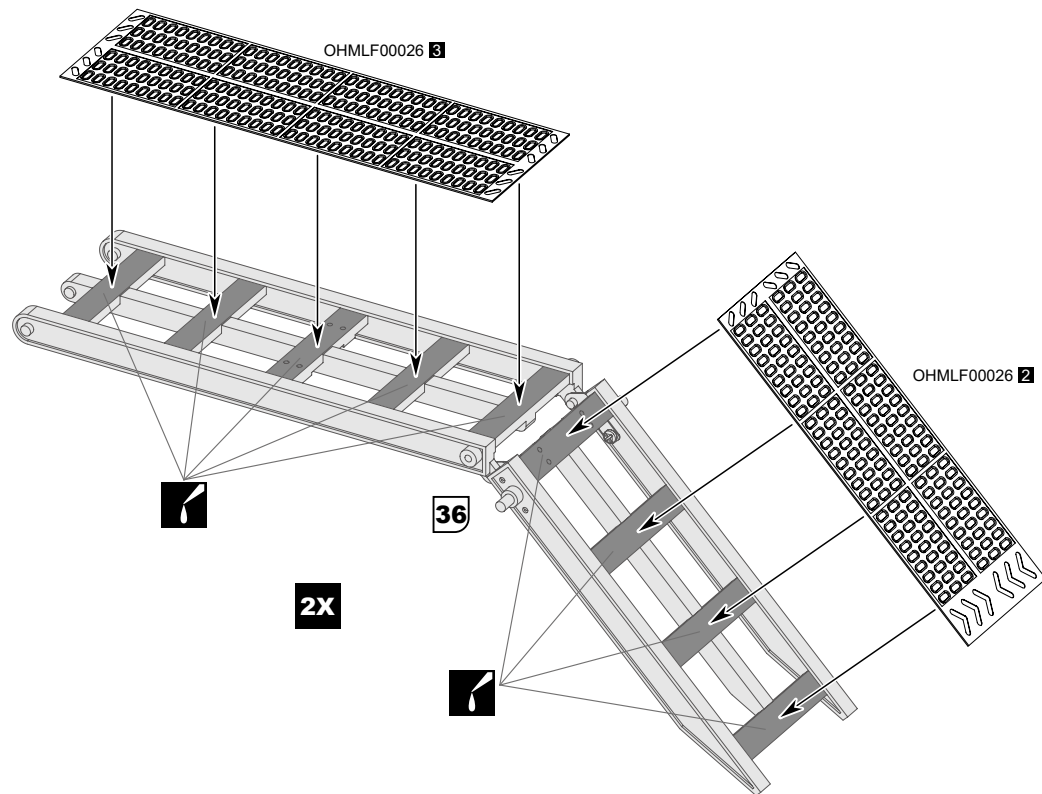



38

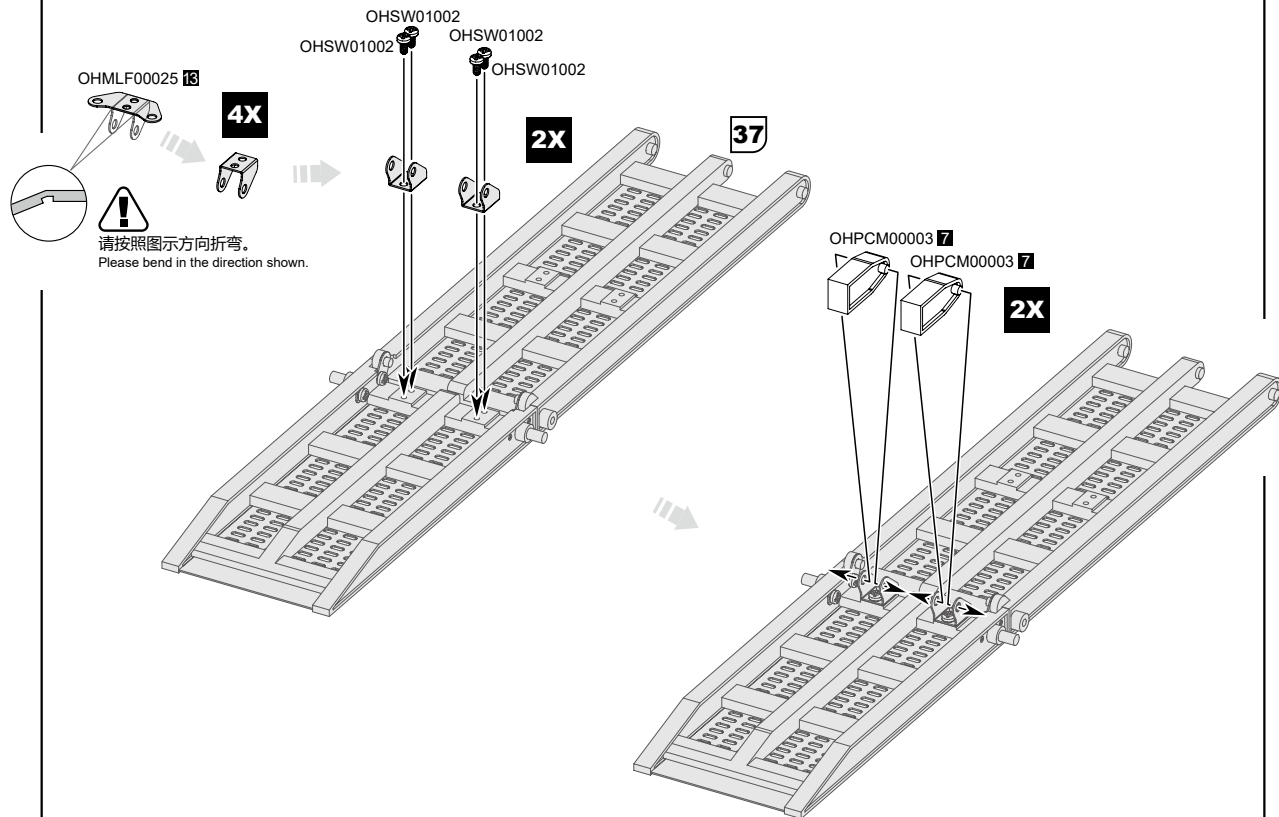

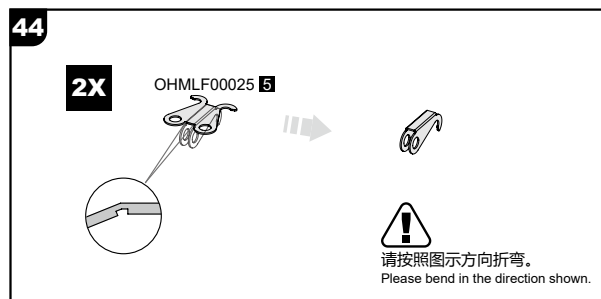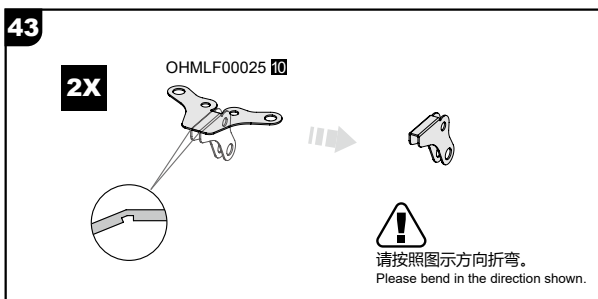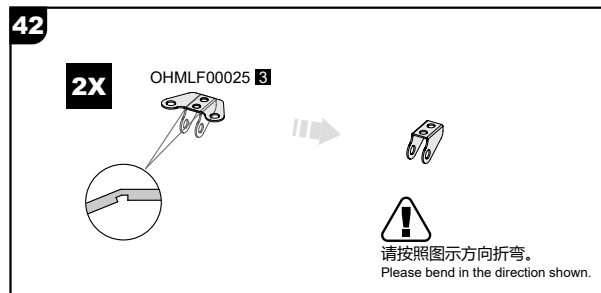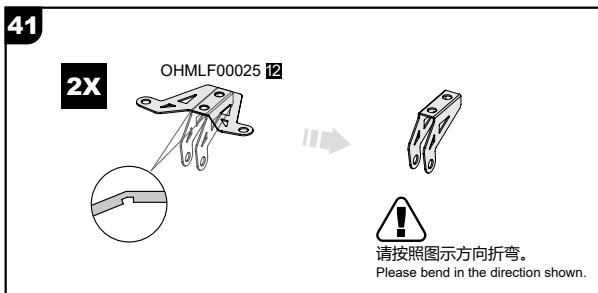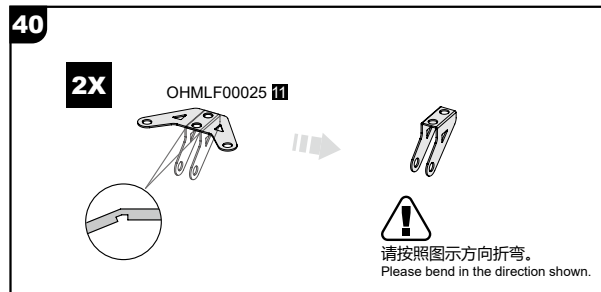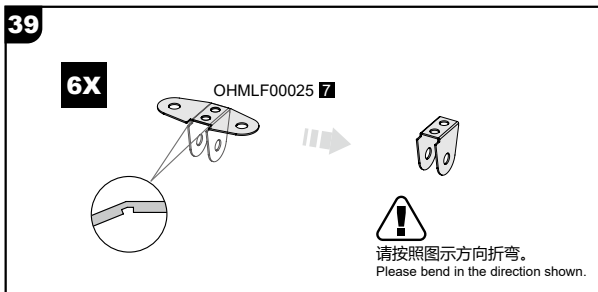


45

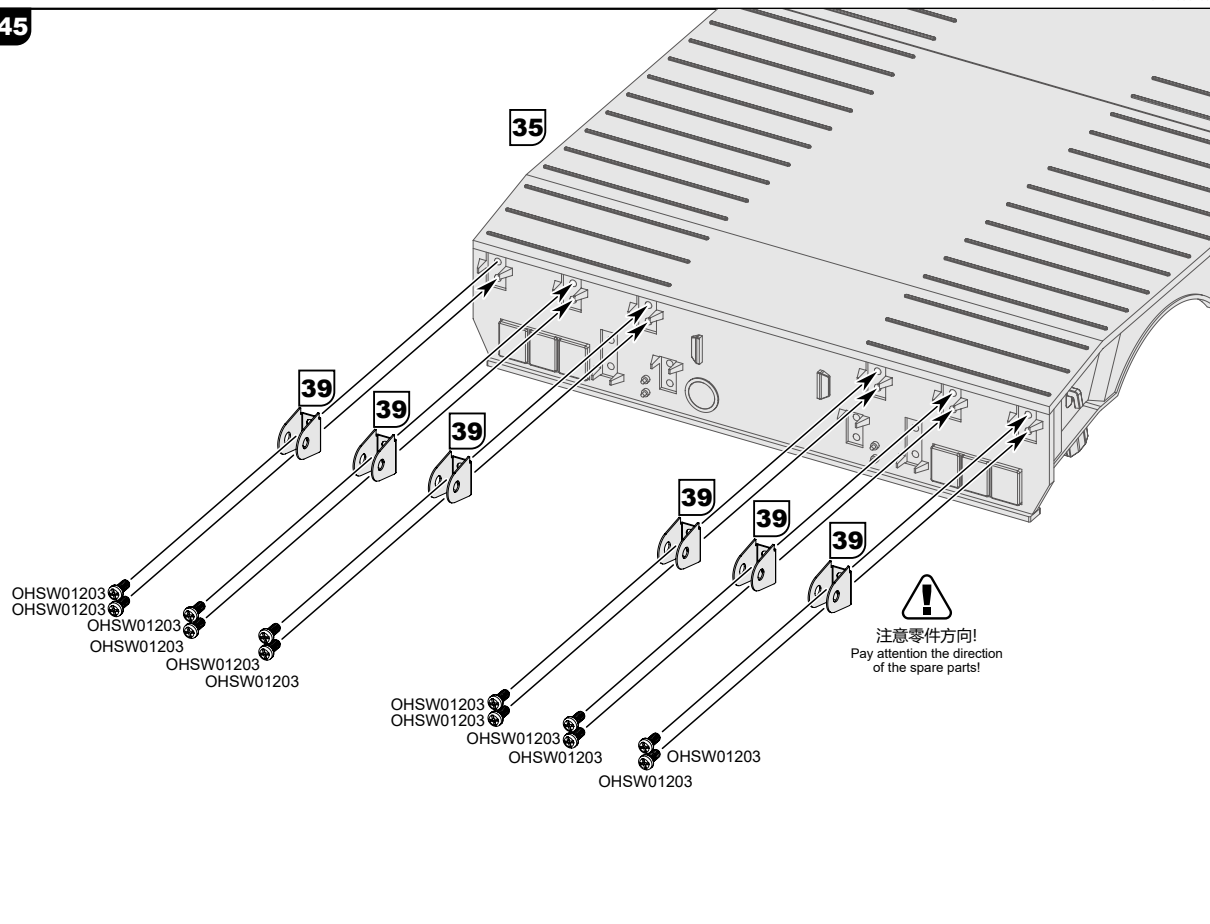

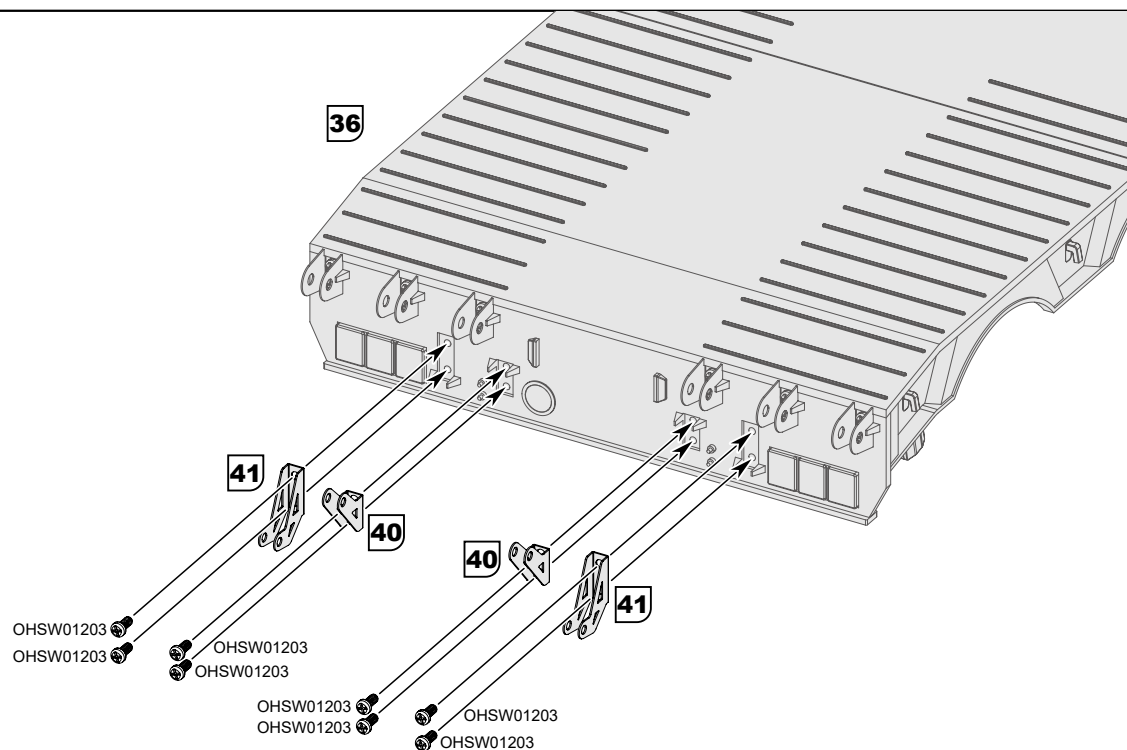

47

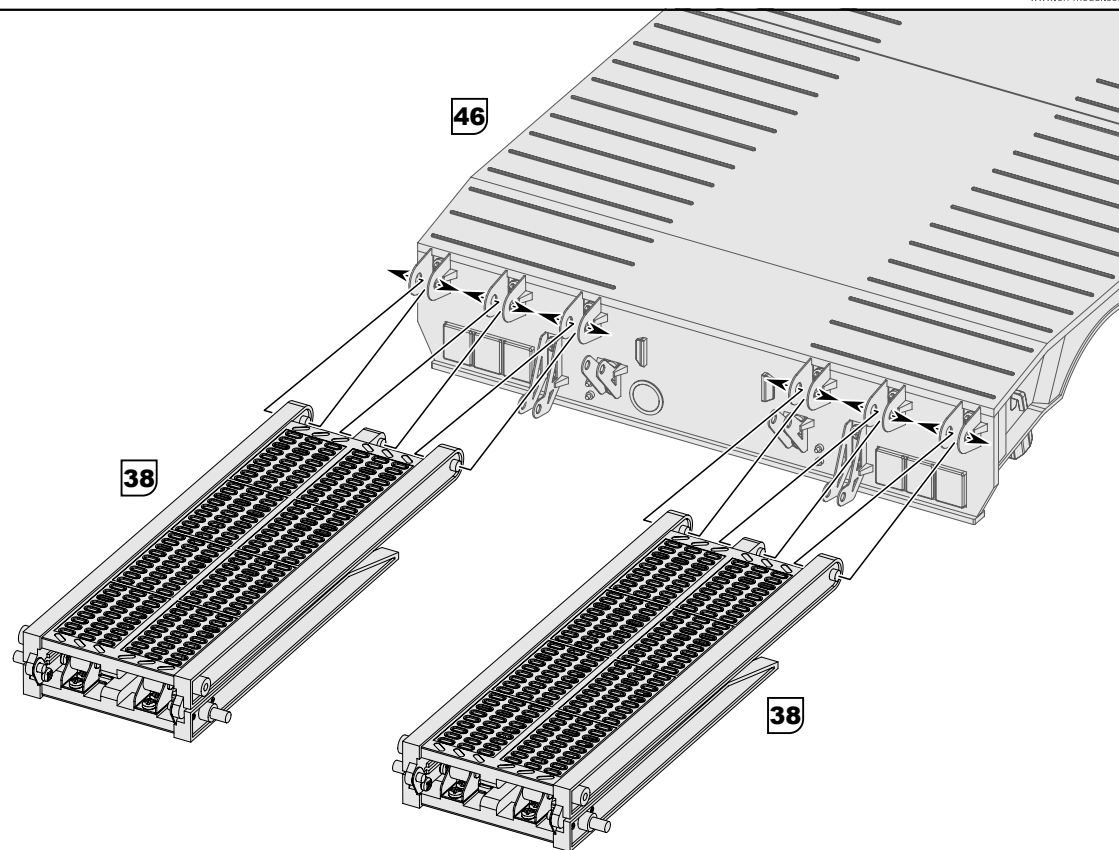

 **2X** OHSW61516

 **4X** OHSW01002

48

OHSW61516

44

47

44

OHSW61516


42

42

OHSW01002

OHSW01002

OHSW01002
OHSW01002

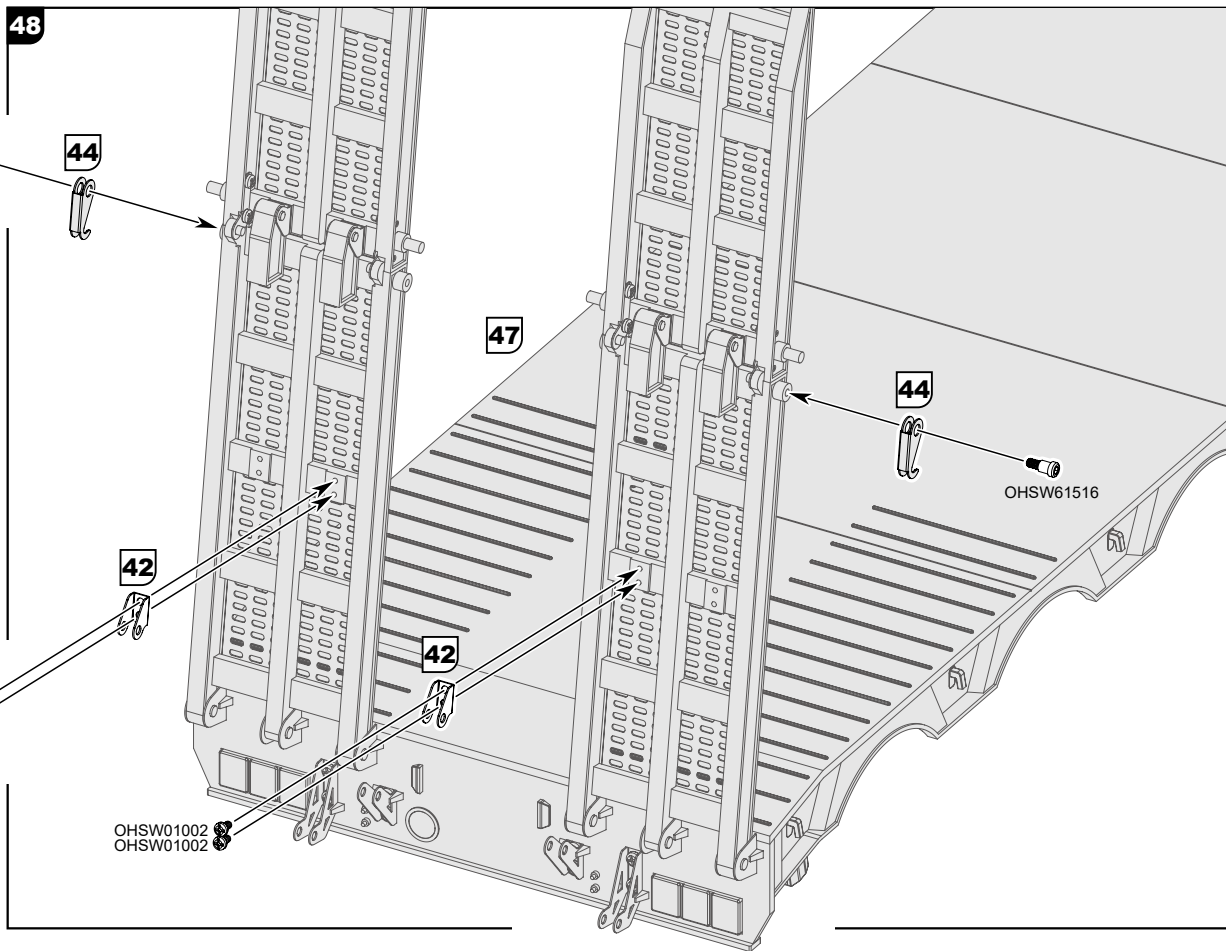

2X


After assembling, please measure the
Both two rod ends should keep parallel

OHPCM00003 9


OHMLB01262

OHPCM00003 8

51

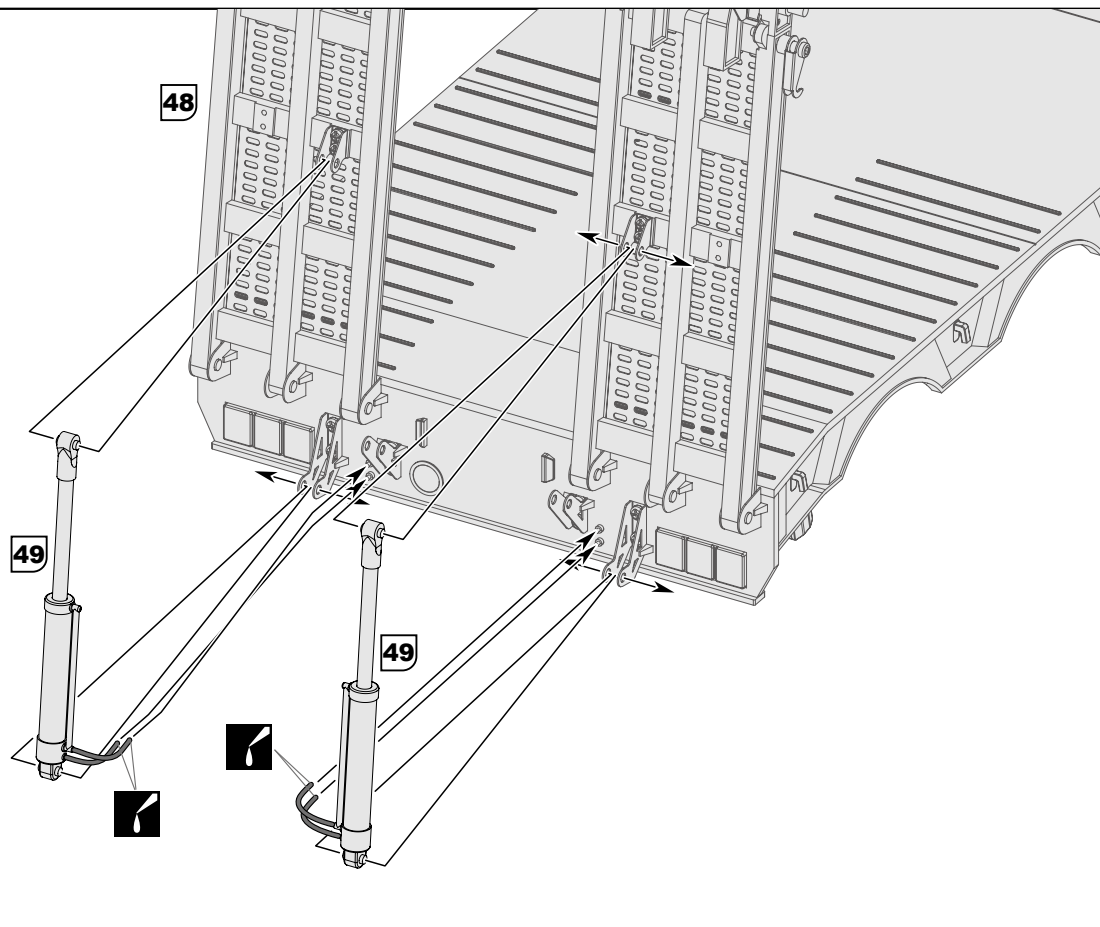


52

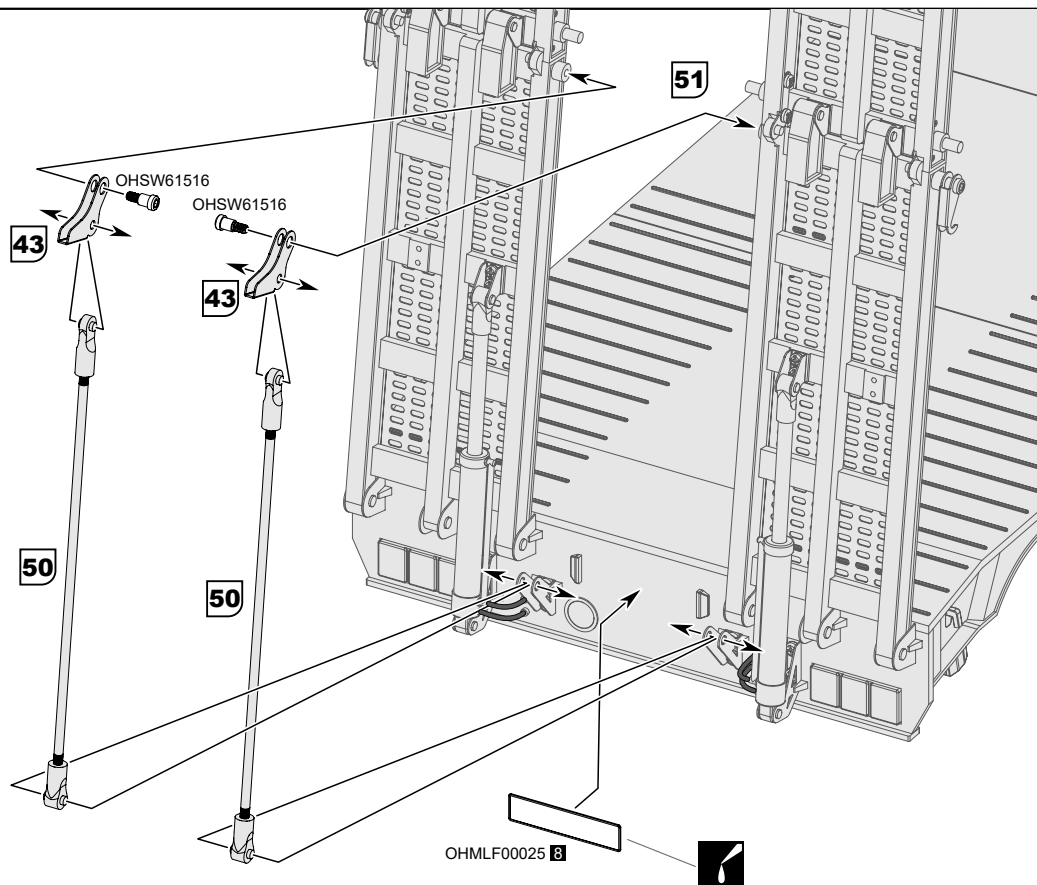



60X OHSW11007


53

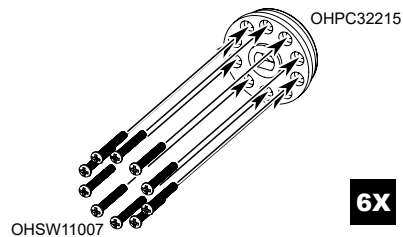

0P


可升级金属法兰盘!

Optional to metal flanges !



GA5003


54

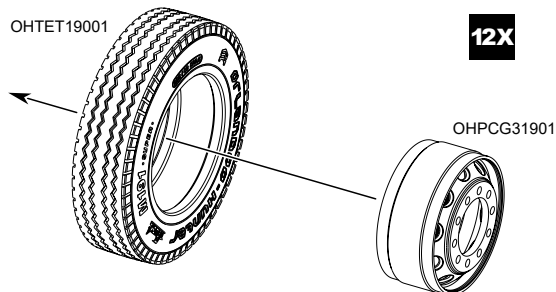

0P

可升级金属轮毂!

Optional to metal truck wheel hub !

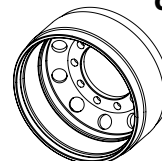


GA4018



6X OHSW90102

55

52

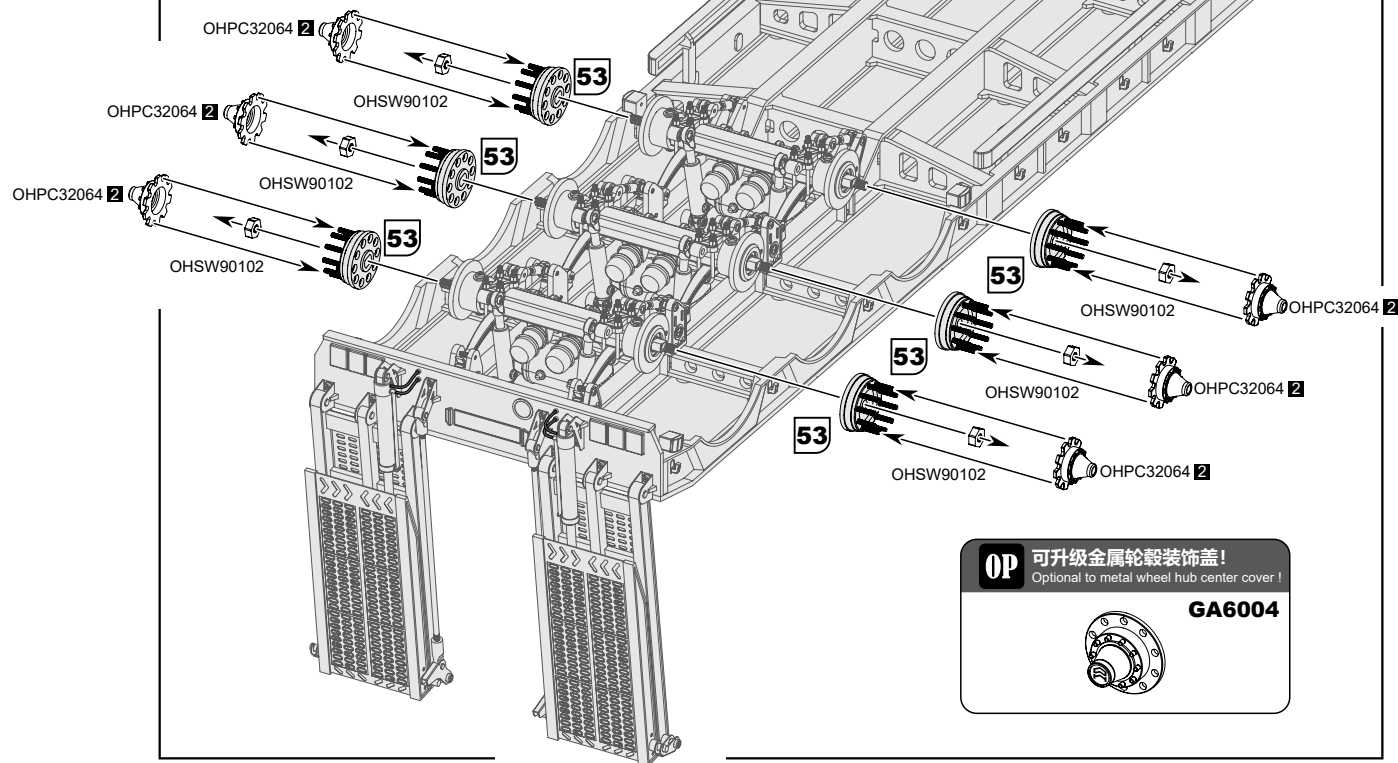

OP

可升级金属轮毂装饰盖!

Optional to metal wheel hub center cover!

GA6004



