

感谢您购买 奥三多汉特 攀爬系列 OR35AM KIT 模型。

请您务必仔细阅读说明书，根据说明书的提示来帮助您完成您的模型。本套件为KIT散件版本，需要您动手组装上色及调试。

Thanks for choosing **ORLANDO-HUNTER** ROCK CRAWLER Series OR35AM KIT model. Please read our instructions carefully, and following our instructions to help you finish assembling the model. The kits are parts, need assembling, painting and debugging by yourself.

本套件不含电子设备，您至少还需购买：

The kits are not including the following parts which you need to buy:



发射机
Transmitter

接收器
Receiver

调速器
Mini ESC

减速电机
Motor

2.2g 舵机
2.2g Servo

锂电池
Li-po

充电器
Charger

您还需要购买涂料、遮盖胶带、流缝胶、美工刀等工具辅料，来协助您完成您的模型。

Besides, in order to finish your model, following Supplementary material you also need to buy: Coating, Masking Tape, Seam Glue, Utility Knife.



涂料
Coating

遮盖胶
Masking Tape

流缝胶
Seam Glue

美工刀
Utility Knife

您还可以升级“D4L”2.4Ghz 4合1遥控套装，其内置了接收机、有刷电机调速器、声音模拟器和多功能联动灯组功能（灯组包含：大灯、辅助灯、转向/双闪灯、刹车灯、倒车灯），使模型更仿真。还可选择轮毂配重环，降低整车重心，提高姿态仿真。

Upgrade D4L 2.4Ghz, that's 4 and 1 remote control suits.

The built-in ESC inside the receiver, Also sound simulator, Remote control receiver and light group (contain: Headlight, Auxiliary light, Turn light, Brake light, Reverse light.) That make the model more realistic.

You also choose Balance Weight, Reducing the center of gravity of the whole vehicle and improving the simulation of attitude.



4合1遥控
4in1 Radio System



配重环
Balance Weight

⚠️ 注意 ATTENTION

组装完成后的模型内含有高减速比齿轮及微型传动系统，请不要尝试使用一切外力强制推动汽车模型。这将可能损坏传动系统及齿轮组件！

模型内含有微型连接件及外观仿真件，请防止高空坠落或挤压模型。这将可能损坏微型部件及外观零件！

请勿将模型长时间放置于阳光下，这将可能加速塑料及橡胶的老化！

After finish assembling the model, please do not use any large strength to push the model, since the inside have high reduction ratio gearwheel and mini transmission system, if do will cause the transmission system be damaged!

Since the model have the mini connection parts and simulation parts inside, please avoid the model be altitude fall or squeezed, otherwise, it will cause the damage of mini connection parts and simulation parts!

Please do not put the model in the sun at long time, otherwise, it will accelerate aging of the plastic and rubber parts!

⚠️ 警告 WARNING

套件内用于包装的塑料袋使用后请及时收好，或者丢弃在可回收垃圾桶内。请勿让儿童当做玩具，可能会导致窒息危险！

The plastic bag of kits, after using please promptly put away or throws into the recyclable rubbish bin, if get by child, might have choking hazard!

⚠️ 警告 WARNING

本套件不适合14岁以下使用！


The kits are not suitable for child under 14 years old!



套件内含有大量微小零件，若儿童吸入或误食，可能会导致窒息等危险！请务必放置于儿童不易接触的地方！

The kits including many mini parts, if the child inhalation or mistake eaten, can cause choking or other serious hazard! Please be sure put the model at the place where child can not touch it!

size 135th

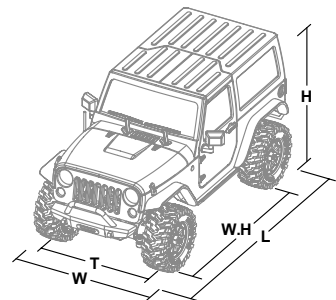

尺寸/参数 SIZE / DATA

长度 L	宽度 W	高度 H	轮距 T	轴距 W.H
126mm	57mm	63mm	50mm	77mm

⚠️ 提示 TIPS

在开始组装前，请先准备好所需要用到的工具，按照说明书左侧提示打开相对应的包裹（不要将所有零件包全部打开或全部取出，以免弄混或者丢失），取出相对应的零件（只需要取出左侧标注的零件数量）。因个别零件尺寸比较小，特别是螺丝等小零件，非常容易丢失，使用小盒子、小盒子等来放置待组装的小零件，能有效防止其丢失。

取出零件后如发现毛刺或飞边的，请先用美工刀进行修整，再用砂纸打磨光洁后再进行组装。进行这一步骤后将组装完成后运行的流畅性和美观性有进一步提升。

组装小零件时注意控制力度，以免损坏零件或使零件掉落而丢失。

Before assembling, please according the instructions tips to open and take out corresponding package, ready for all the tool you need (please not open all the package, it will cause the parts lost or confused). Because some spare parts are really very small, especially the screw etc., which is easily missing, you can put them into a small dish or box first to avoid missing.

Before assembling check the spare parts first, if any burr found, please use utility knife to make it flat, and then use sandpaper to make it smooth. After doing this the fluency and aesthetics of the model will be upgraded.


During assembling the spare parts, please do not use over strength or else will cause the spare parts break or drop.

部件/编号对照 PARTS / REFERENCE NUMBER


以下为 奥兰多汉特 攀爬系列 **ORLANDO HUNTER** 所包含的所有零部件编号及数量对照表。
如组装或者使用过程中损坏或者丢失其中一些部件，可按照零部件编号购买相应的零部件用以替换。
如需要对模型进行改装及加装，也可按照所需要改装或加装的零部件的编号进行购买。

Following is the comparison table of all spare parts and numbers of the **ORLANDO - HUNTER** ROCK CRAWLER Series **ORLANDO HUNTER** Model.

During the assembling, if some spare parts break or lost, you can according the number in the chart to buy a new one to replace it. If need remodel or adding, also can according the chart to buy some additional spare parts.

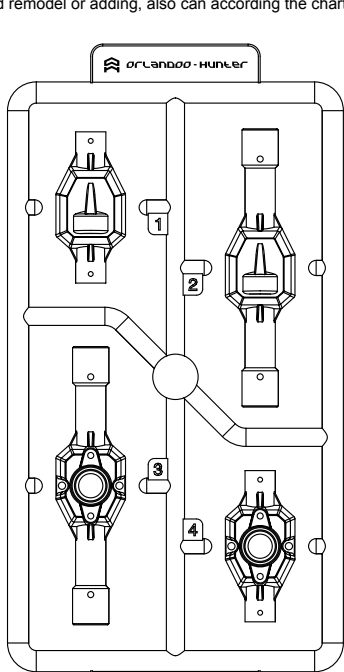


OHPCF20510 **1X** OHPCF20510


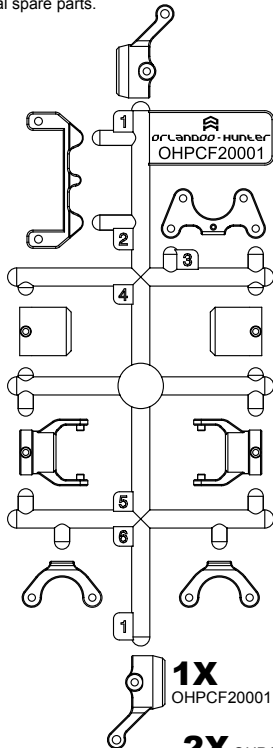


1X
OHPCF20001


2X OHPCA20124

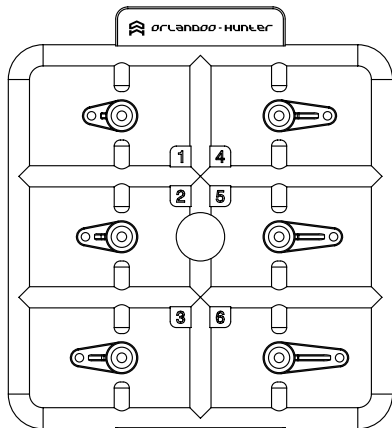


OHPCH22010 **1X** OHPCF20510

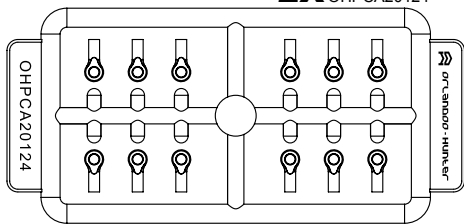





1X
OHPCA20124

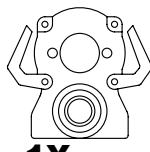


1X
OHPCF20001

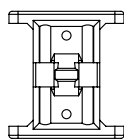


1X
OHPCH22010

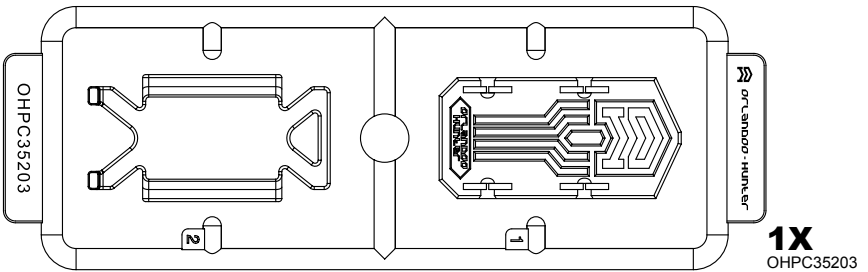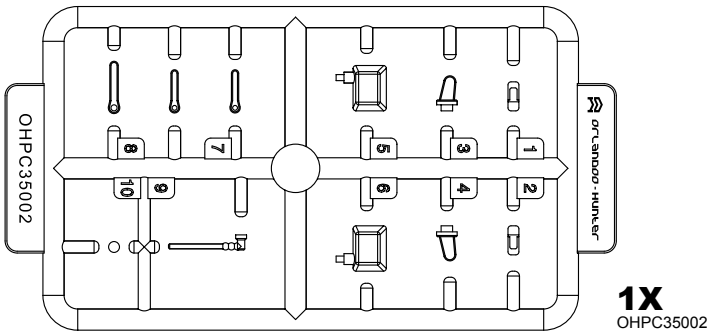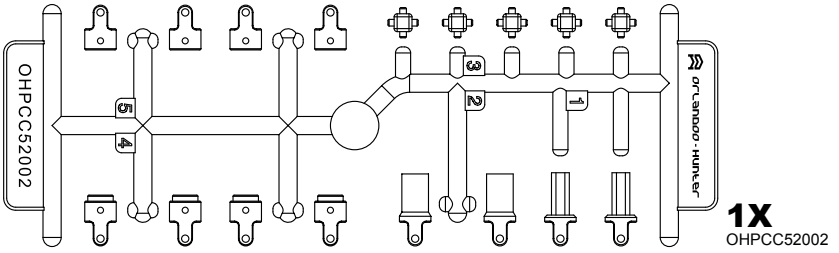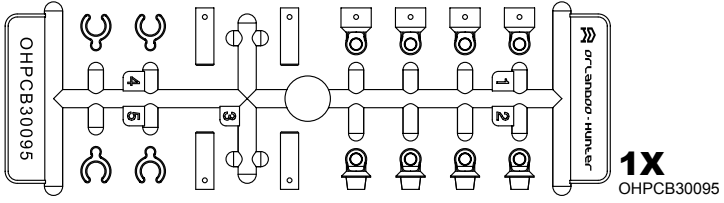


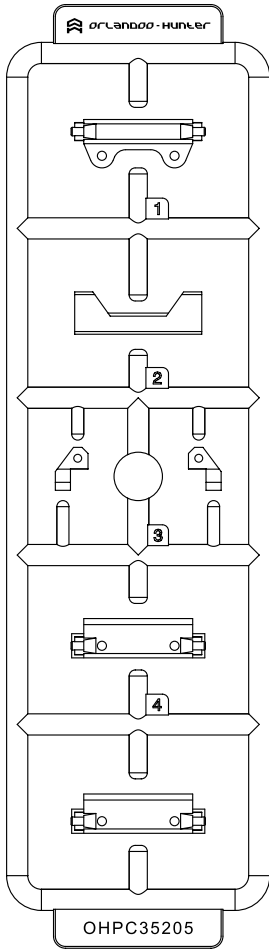


1X OHPC35205

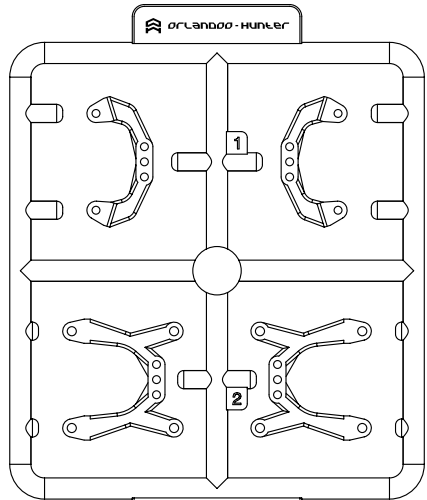


OHPC35204 **1X** OHPC35204

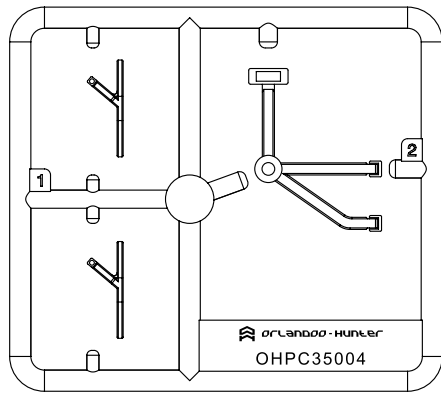


1X OHPC35004

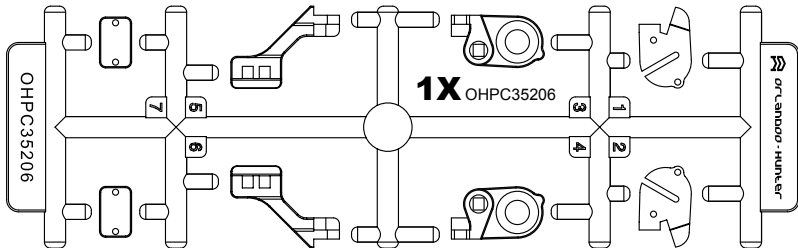


1X OHPC35206

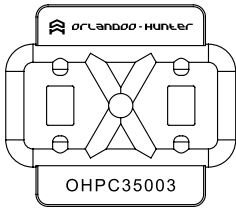


1X
OHPC35003

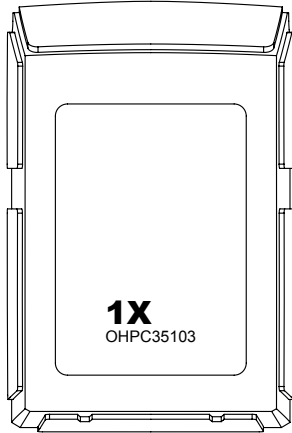


1X
OHPC35103

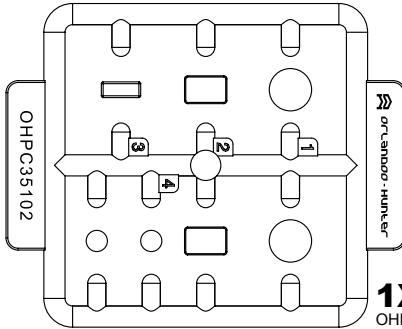

1X
OHPC35102

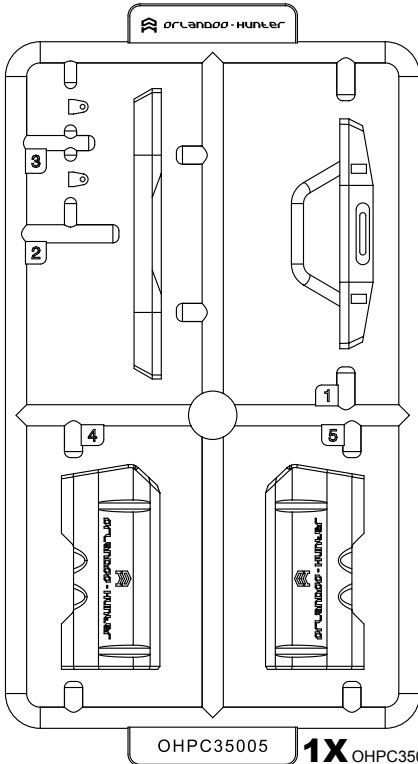


1X OHPC35005

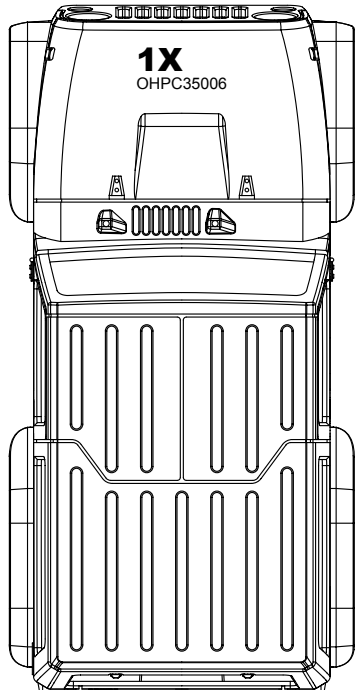


1X
OHPC35006




5X
OHPCG30815

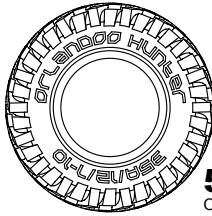


5X
OHTE27103

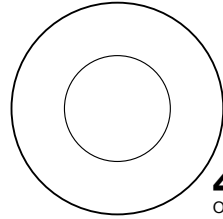


4X
OHSE02814



1X OHMLZ1080L



1X OHMLZ1080R




1X
OHMLE20310



1X
OHMCA05194



5X
OHMLB01215




4X
OHMLB01226



1X
OHMLE20460



1X
OHMCA05191




1X
OHMLB01228



2X
OHMLC2003



2X
OHMLC20001



2X
OHMLC20002



2X
OHMLM21625



2X
OHMLM00640



2X
OHMCB05160



2X
OHMCB05080



2X
OHMLM00835




2X
OHPJE00016



2X
OHPJQ10050



4X
OHMLD01010




4X
OHSGA03001



2X
OHBG40725




4X
OHBG30620



10X
OHBG20520



1X
OHTLB32001



1X
OHTLB10020



1X
OHTLB40009



4X
OHTLC00001

工具包内包含 TOOL CONTENTS

十字螺丝刀
 六角锁胎器
 内六角扳手
 双面减震垫

Phillips Screwdriver
 Nut Driver
 "L" Type Hexagon Screwdriver
 Double Side Tape

以下图标将会出现在接下来的装配图中，请先了解图标的含义！
 Following Icon will appear on the assembling chart, please understanding its meaning first!



制作两份
 Make
 Two Copies



制作四份
 Make
 Four Copies



切除
 Cut



需上色
 Requiring Color



流缝胶
 Requiring
 Glue



选择
 Requiring
 Select



注意
 Attention

A

打开包裹“A”

1X OHMLE20310

1X OHMCB05160

1X OHMCB05080

1X OHMLM00835

1X OHPJE00016

1X OHPJQ10050

4X OHBG20520

6X OHMLA20162


4X OHSW01003

2X OHSW01204

2X OHSW01205

2X OHSW01205

2X OHSW01505

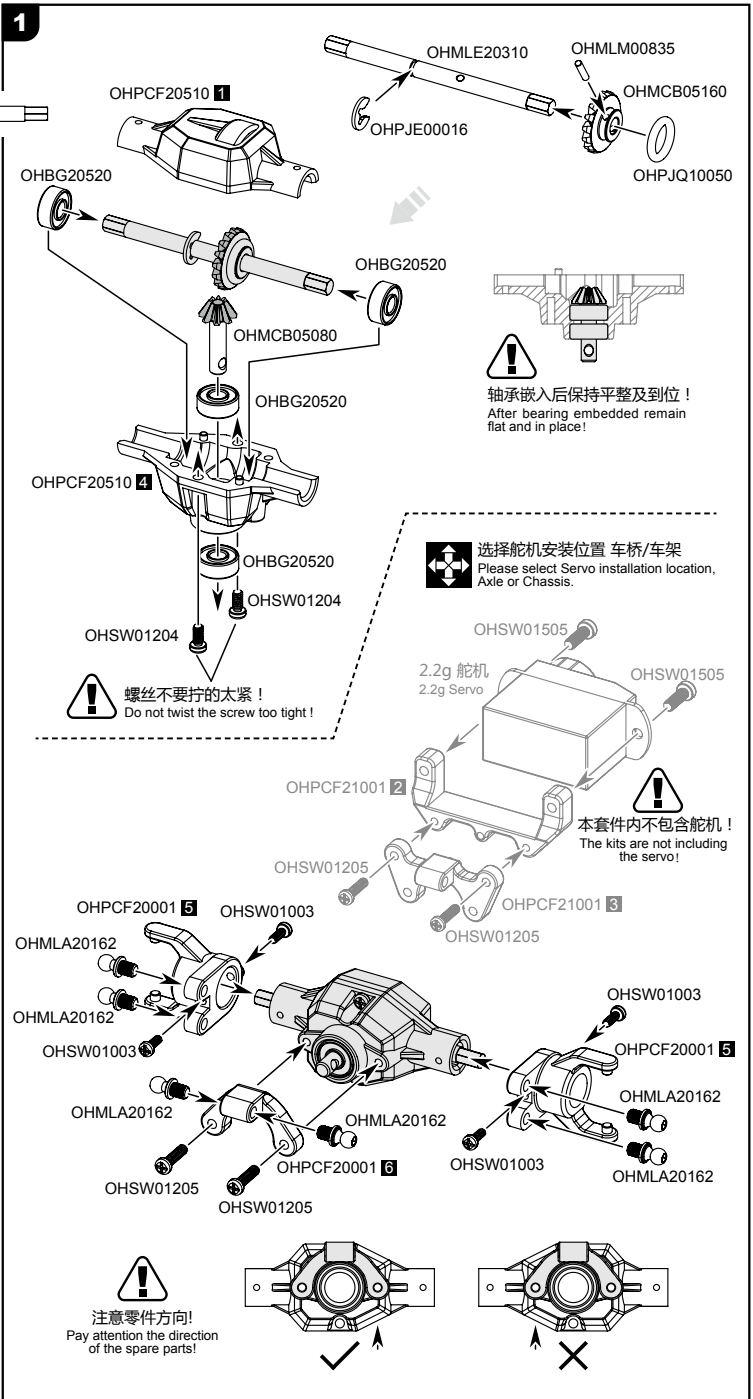

⚠️ 螺丝不要拧的太紧!
Do not twist the screw too tight!


⚠️ 轴承嵌入后保持平整及到位!
After bearing embedded remain flat and in place!

⚠️ 选择舵机安装位置 车桥/车架
Please select Servo installation location, Axle or Chassis.

⚠️ 本套件内不包含舵机!
The kits are not including the servo!

⚠️ 注意零件方向!
Pay attention the direction of the spare parts!







2X OHMLC20001



2X OHMLC20002



2X OHMLM21625



2X OHMLM00640



2X OHBG40725




2X OHBG30620



1X OHMLA20162



1X OHMLA2016B

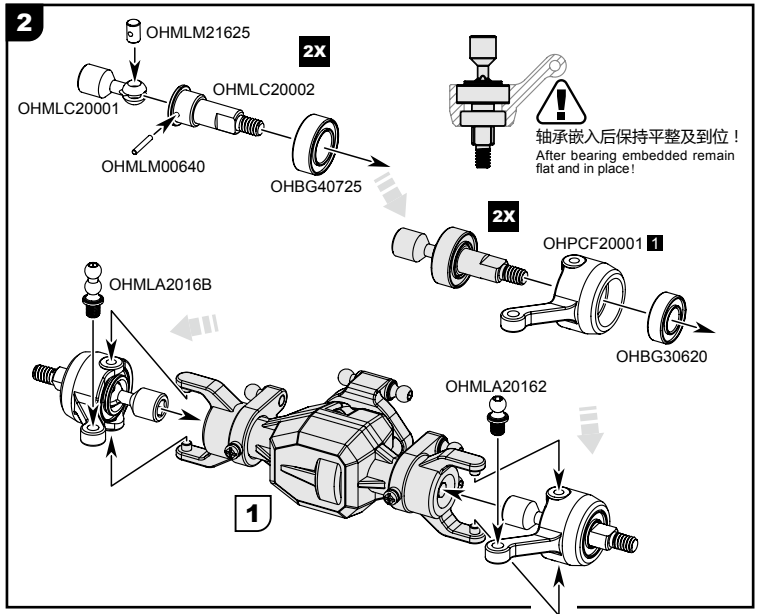

1X OHMCB05160



1X OHMCB05080



1X OHMLM00835



1X OHPJE00016



1X OHPJQ10050




1X OHMLE20460



4X OHBG20520



2X OHSW01204

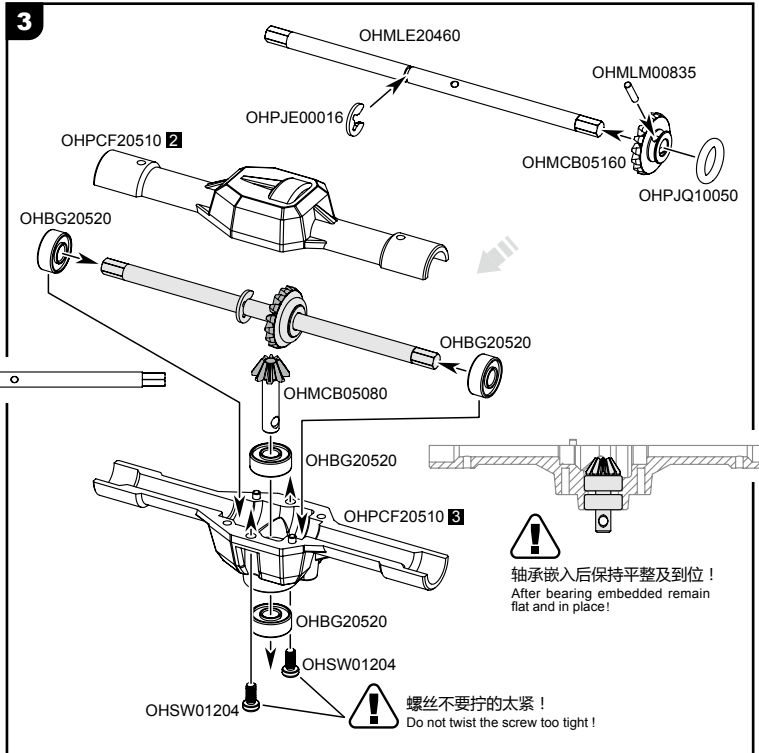

4

OHPCF20001 **4** OHSW01003
OHBG30620
OHMLC20003
OHMLA20162
OHSW01003
OHMLA20162

3

OHSW01003
OHBG30620
OHMLC20003
OHMLA20162
OHMLA20162
OHPCF20001 **6**
OHSW01205
OHSW01205
OHMLA20162
OHMLA20162
OHSW01003
OHPCF20001 **4**
OHSW01003

2X OHMLC20003
2X OHBG30620
6X OHMLA20162
4X OHSW01003
2X OHSW01205

轴承嵌入后保持平整及到位！
After bearing embedded remain flat and in place!

注意零件方向！
Pay attention the direction of the spare parts!

B

打开包裹“B”

1X OHMLB01215

5

OHPCA20124
OHMLB01215
OHPCA20124

9mm

装配后请测量平面至平面距离约为9mm，两端拉杆头需成90度角。
After assembling, please measure the distance between planes should be about 9mm, both two rod ends should be 90 degree.

6

OHPCA20124
OHMLB01228
OHPCA20124

22.2mm

装配后请测量平面至平面距离约为22.2mm，两端拉杆头保持平行。
After assembling, please measure the distance between planes should be about 22.2mm. Both two rod ends should keep parallel.

7

OHPCA20124
OHMLB01215
OHPCA20124

4X

8.5mm

装配后请测量平面至平面距离约为8.5mm，两端拉杆头保持平行。
After assembling, please measure the distance between planes should be about 8.5mm. Both two rod ends should keep parallel.



8

OHPCA20124

2X

OHMLB01226

OHPCA20124

19.5mm

! 装配后请测量平面至平面距离约为19.5mm，两端拉杆头保持平行。
 After assembling, please measure the distance between planes should be about 19.5mm. Both two rod ends should keep parallel.

9

OHPCA20124

2X

OHMLB01226

OHPCA20124

20.5mm

! 装配后请测量平面至平面距离约为20.5mm，两端拉杆头保持平行。
 After assembling, please measure the distance between planes should be about 20.5mm. Both two rod ends should keep parallel.

10

2

5

6

7

8

11

4

7


7

9


9

C

打开包裹“C”



1X OHMCA05191



1X OHMCA05194



2X OHBG20520



8X OHMLA20162



4X OHSW01205



2X OHSW01505



2X OHSW11603



1X OHSW82002



OHSW01205



OHSW01205



OHSW01205



OHSW01205

12



本套件内不包含电机！
 减速电机减速组尺寸为12mm*10mm*9mm，
 电机最长限制为18mm，
 减速组输出轴径为3mm 轴长4.5mm。

The kits not included any motor!
 The decelerate size is 12mm*10mm*9mm,
 The max length of motor is 18mm,
 The deceleration group output shaft diameter is 3mm,
 shaft length is 4.5mm.

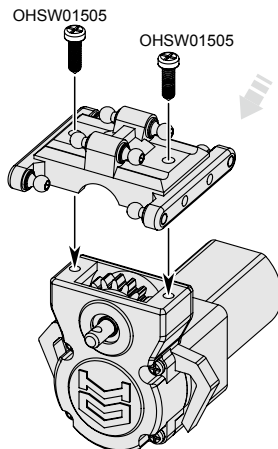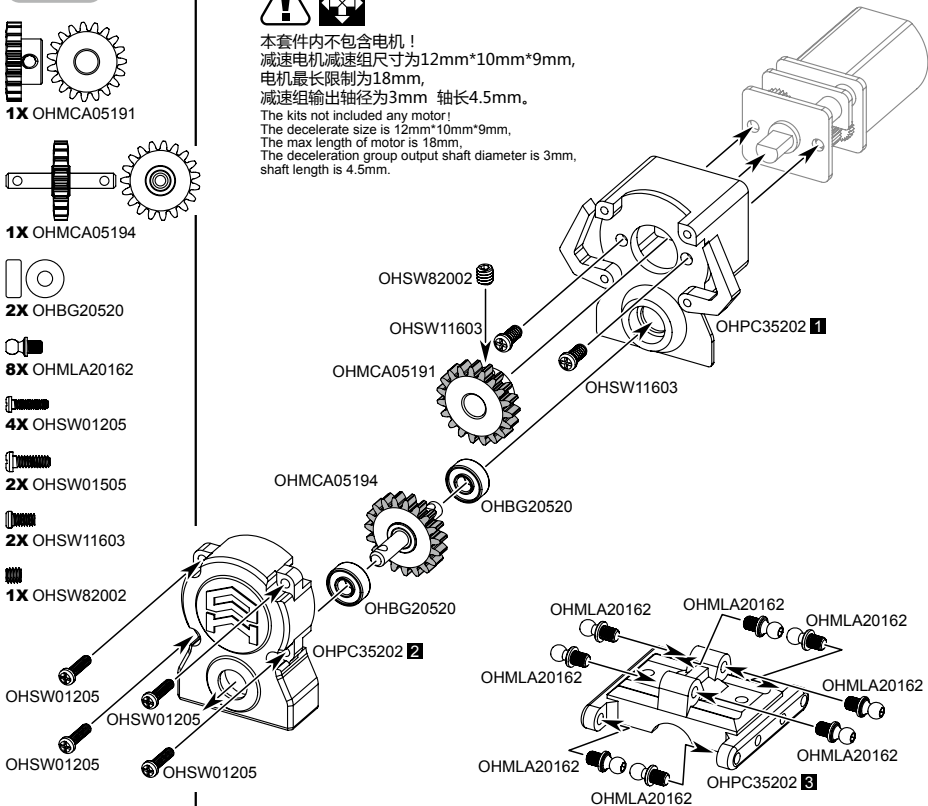

87116
OH35Am KIT

13

1X OHMLZ1080R



1X OHMLA20162



4X OHSW01003



4X OHSW01503



2X OHSW01505




本套件内不包含LED灯组！
 The kits do not included any LED lamp.

可插入4mm LED灯珠。
 Embed in 4mm LED lamp beads.

可插入贴片LED。
 Embed in SMD LED.

可插入贴片LED。
 Embed in SMD LED.

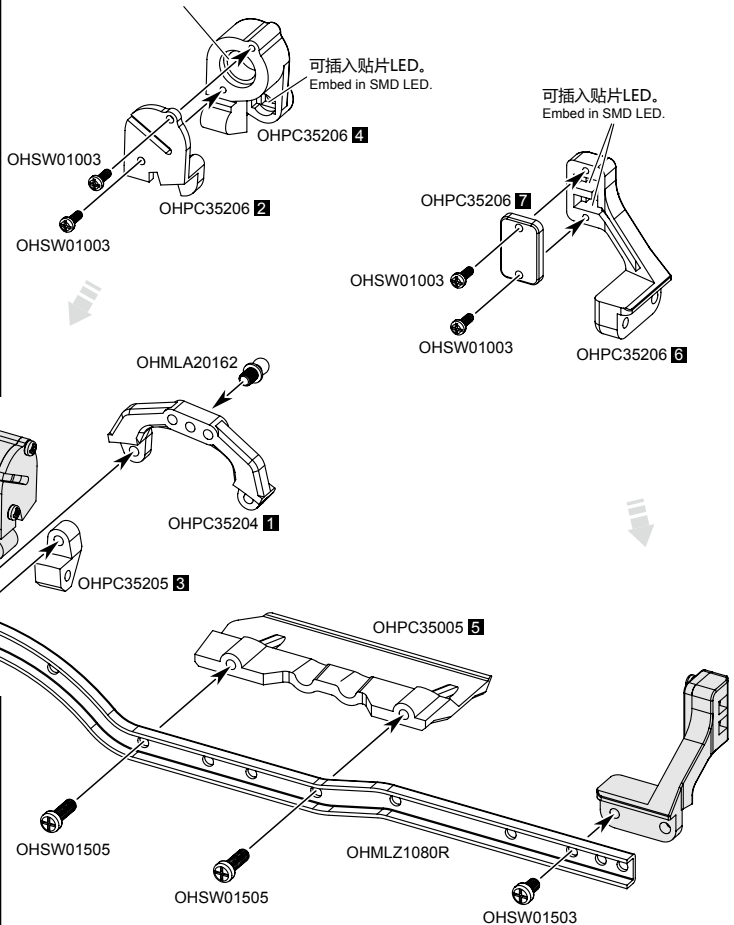

1X OHMLZ1080L



1X OHMLA20162




4X OHSW01003




4X OHSW01503



2X OHSW01505





可插入贴片LED。
Embed in SMD LED.

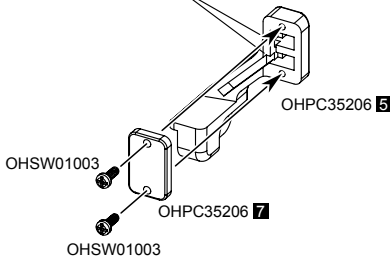

本套件内不包含LED灯组！
The kits do not included any LED lamp.


可插入4mm LED灯珠。
Embed in 4mm LED lamp beads.

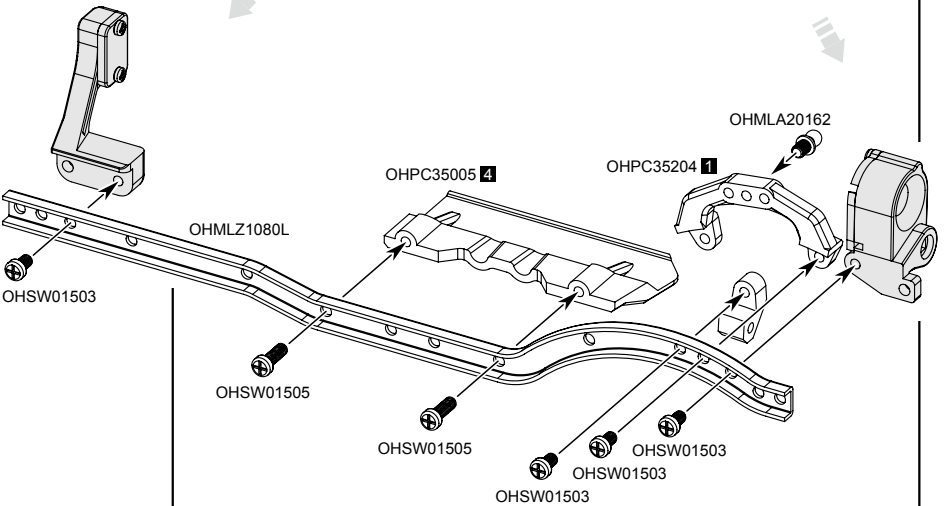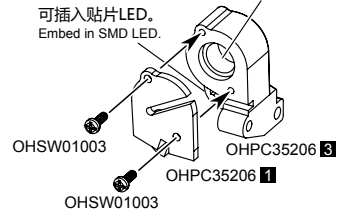




2X OHSW01505

15

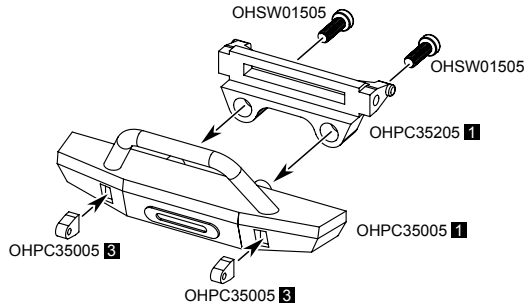

2X OHSW01505

16

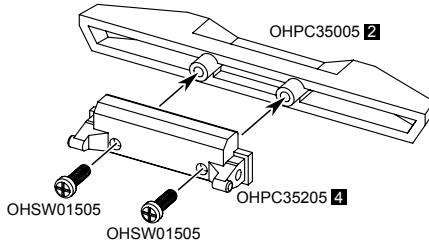

1X OHMLA20162




1X OHSW01503

17




本套件内不包含舵机！
 The kits are not including the servo.

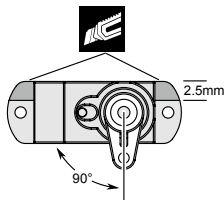


2.2g 舵机
 2.2g Servo




请在安装舵机前调整好舵机中立点，
 按上图安装舵机摇臂，舵机摇臂和舵
 机底面呈90度角。

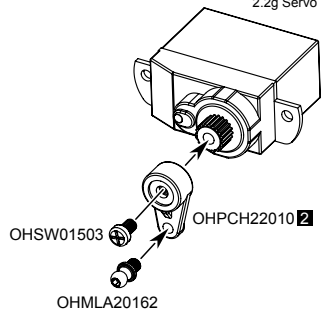
Before fixed the servo, please set the
 intermediate point, according the above
 chart to fix the arm of motor, the arm should
 vertical to the bottom surface.




-  **2X** OHMLA20162
-  **4X** OHSW01503
-  **16X** OHSW01505

18

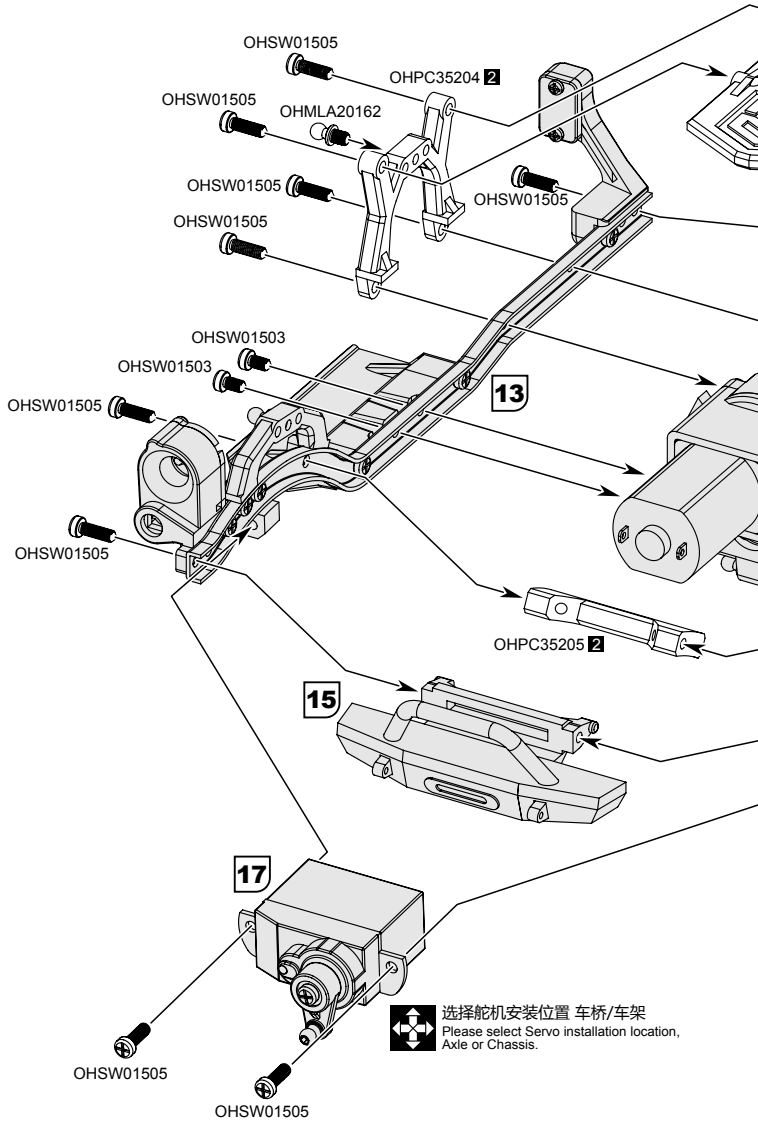

 选择舵机安装位置 车桥/车架
Please select Servo installation location, Axle or Chassis.



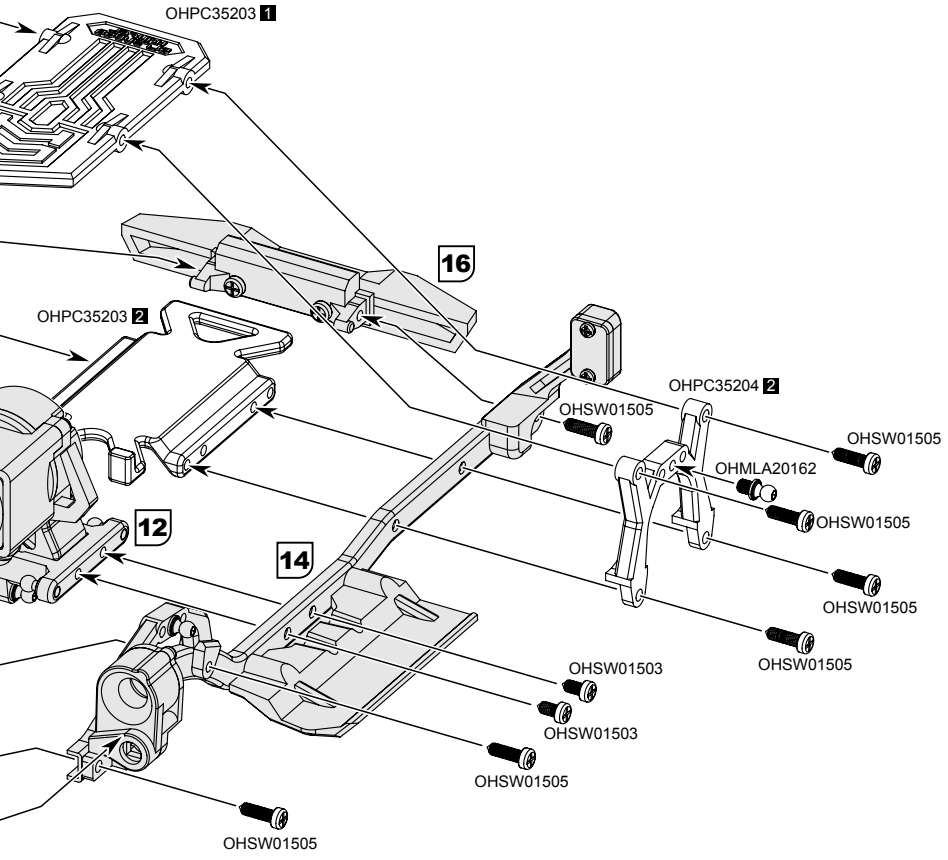

D


打开包裹'D'

4X OHMLD01010

4X OHSGA03001

4X OHSW01005


19



请调整减震距离约为14mm。
Please adjust the distance between shock absorber.
请使用尖嘴钳夹住丝杆再拧入减震座。
Please use Needle-nose pliers clamp to rod then twist into the shock absorber seat.




螺丝请勿拧入过紧，过紧可能导致减震筒身变形，导致顺滑度降低！
Do not twist the screw too tight, if too tight will cause the deformation of the shock absorber tube!

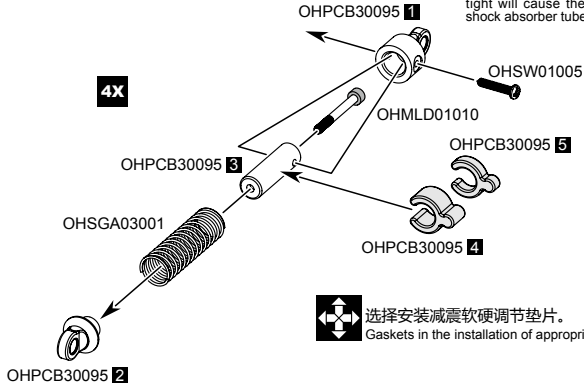


选择安装减震软硬调节垫片。
Gaskets in the installation of appropriate selective.

20

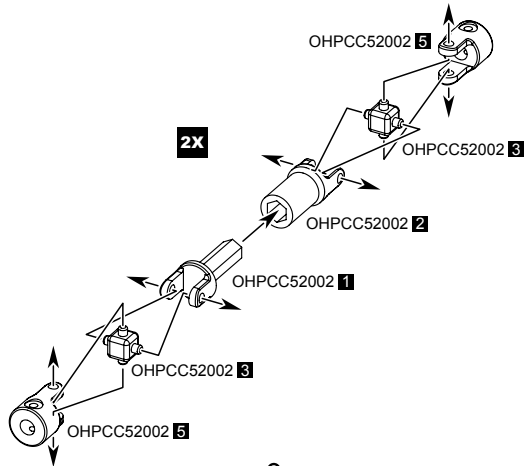

套入万向节时请控制力度，零件较小，请耐心组装。
Do not use over strength to set the universal ball. due to the small spare parts, please be patient when assembling.


4x OHSW01204

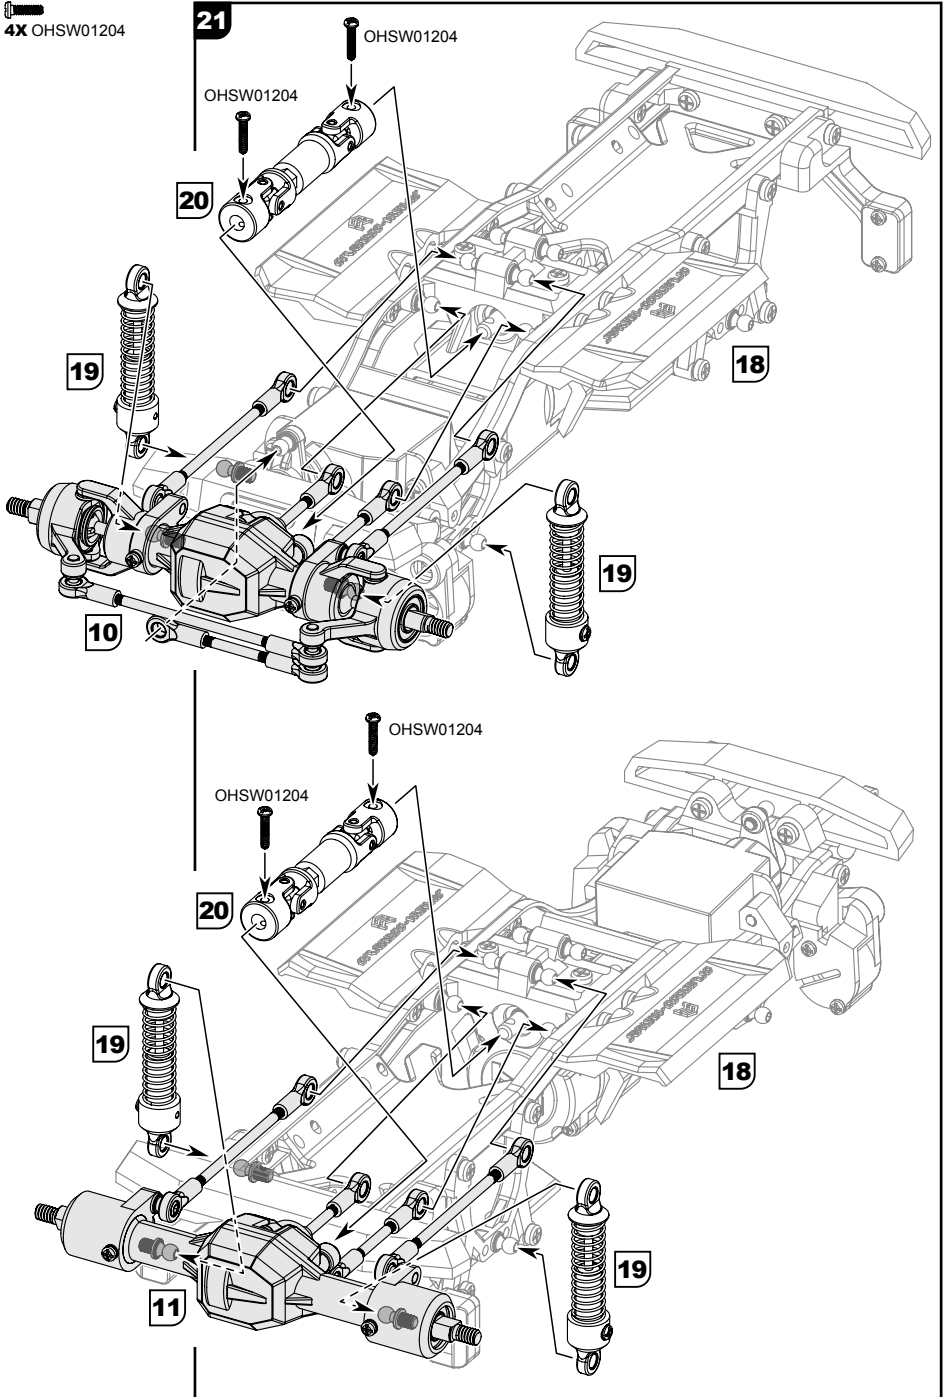

E₁
打开包裹“E”

E₂
打开包裹“E”



22

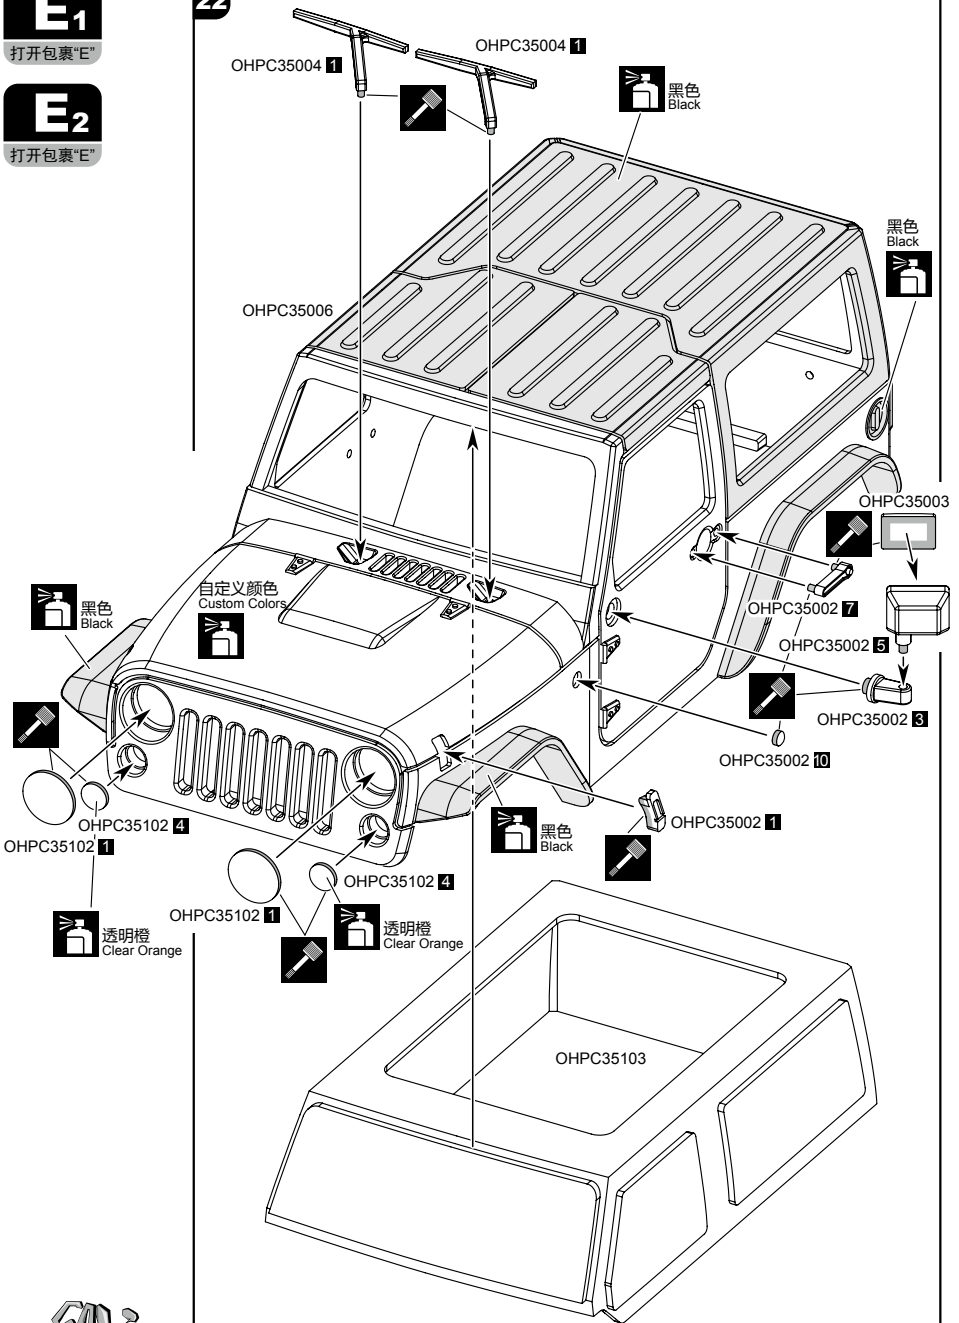

1X OHSW12014

1X OHSW90102

23

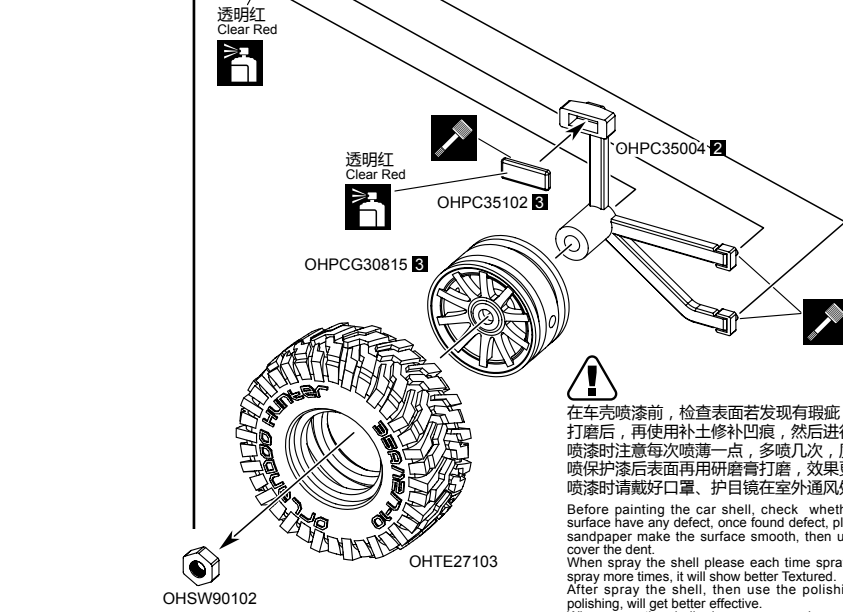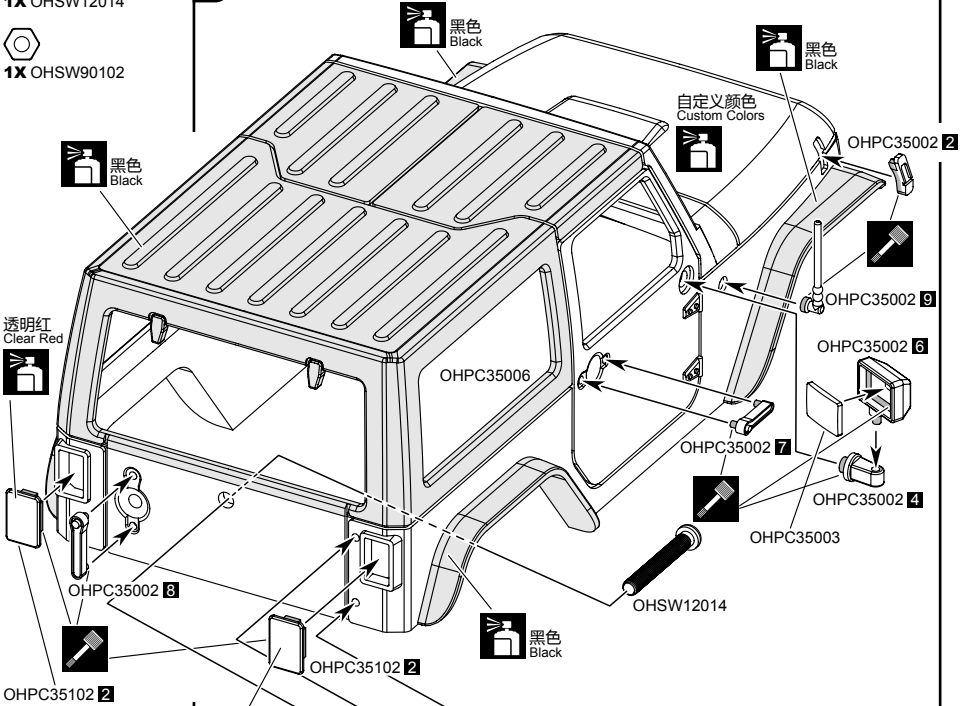

!
 在车壳喷漆前，检查表面若发现有瑕疵，请用砂纸打磨后，再使用补土修补凹痕，然后进行细打磨。喷漆时注意每次喷薄一点，多喷几次，质感更好。喷漆时请戴好口罩、护目镜在室外通风处进行！

Before painting the car shell, check whether the shell surface have any defect, once found defect, please use the sandpaper make the surface smooth, then use fill soil to cover the dent.
 When spray the shell please each time spray little, try to spray more times, it will show better Textured.
 After spray the shell, then use the polishing paste to polishing, will get better effective.
 When spray the shell, please wear masks and goggle first and work at the outdoor ventilation place!

F
打开包裹“F”



4X OHSW90102



OHTE27103



注意零件方向!
Pay attention the direction
of the spare parts!

24



OHPCG30815

OHSE02814

2X




注意零件方向!
Pay attention the direction
of the spare parts!

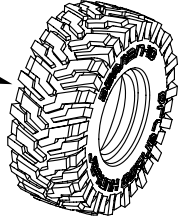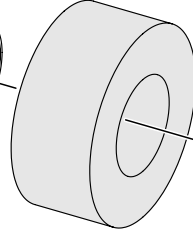


OHTE27103

2X

OHSE02814

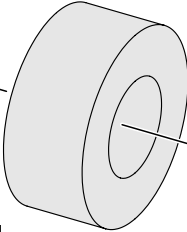

OHPCG30815




OHSW90102




电线固定扣
Wire buckles

设备固定板
Device fixing plate

电池仓
Battery compartment

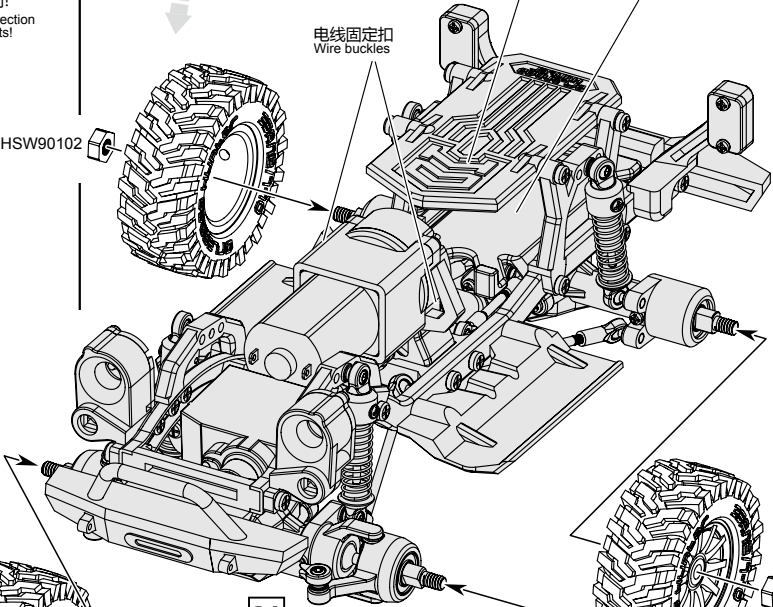


OHSW90102

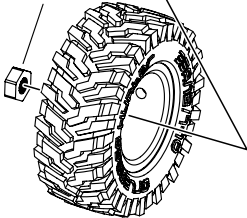

21



OHSW90102

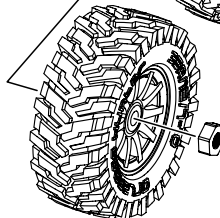


OHSW90102

8Bit
OH35Am KIT

25

23

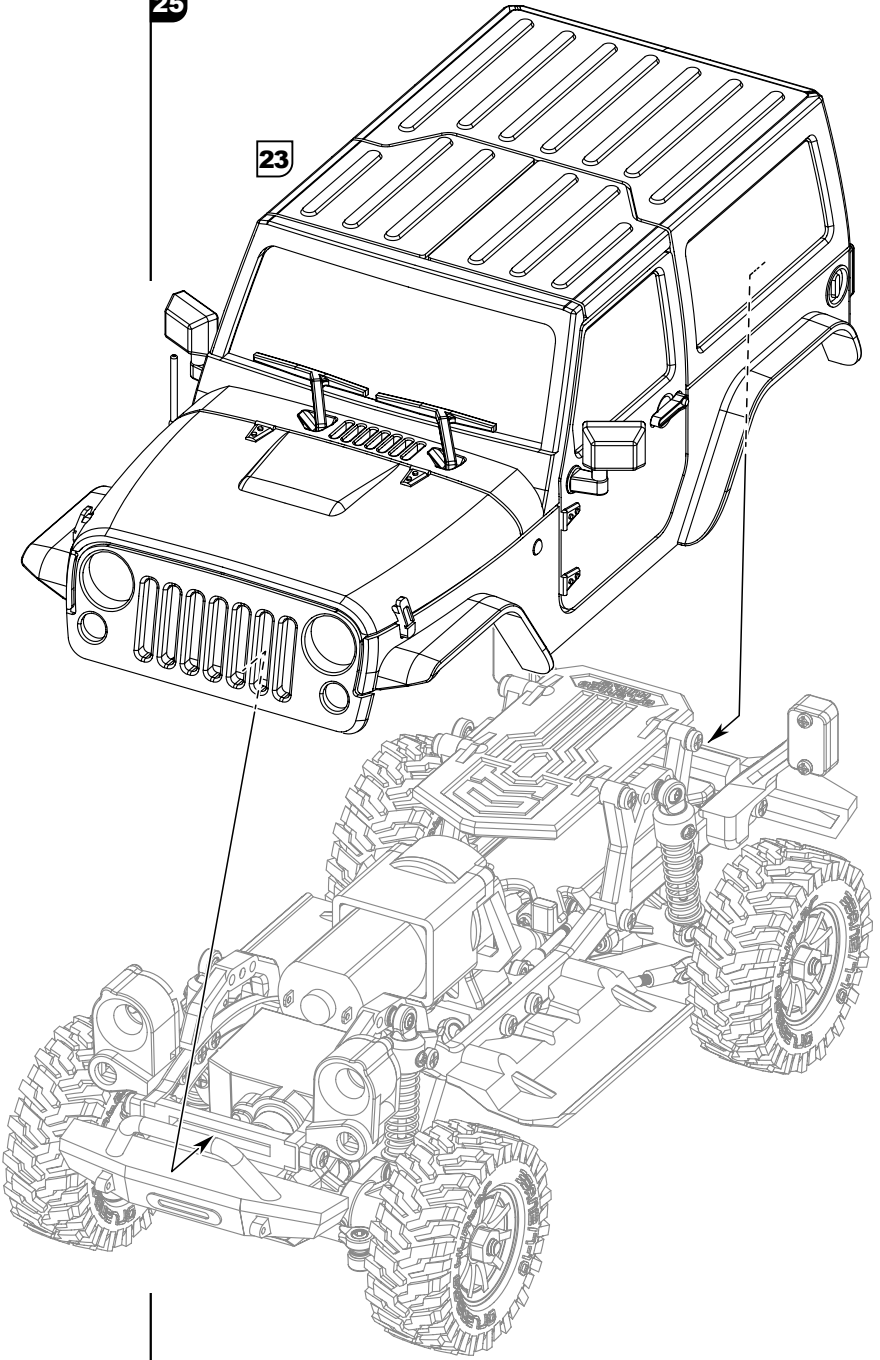

车桥/轴距调整 AXLE / WHEELBASE ADJUSTMENT


组装完毕后，如未发现车桥有明显扭曲或偏向一侧，请跳过这一步骤！

如发现车桥有严重扭曲或偏向一侧，请先拆除下拉杆，按照以下图示进行调整！

调整方法：取下拉杆，顺时针拧动拉杆头为缩短拉杆长度，反之增加拉杆长度！

After assembling, if you not found any deformation or offset to one side of axle, please skip this step! If you found any deformation or offset to one side of axle, please dismantle the rod first, then according the chart to adjust it!

Adjustment method: take out the rod, and twist the head of rod in clockwise direction to make the rod shorter, on the contrary will make the rod longer!

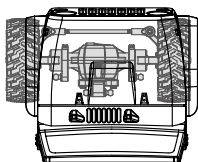


首先拆除下拉杆后将车桥摆正

(车桥轴线和车身纵线垂直)

检查车桥是否向一侧偏移

如向左侧偏移，请缩短右侧上拉杆或增加左侧上拉杆的长度！反之逆向调整！

调平后将下拉杆装回。

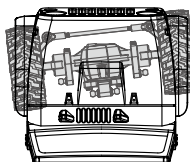

拉杆调整较繁琐，请耐心调整！


Rod adjustment is complicated, please be more patient!

Dismantle the rod, then straightened the axle.
(axis of Axle should be perpendicular to the body longitudinal line)
Check whether axle is offset to one side, if offset to the left, please shorten the rod on the right or increase the length of the lever on the left side!
Or adjustment on the contrary! After it on the level! Then fix back the under rod.

After assembling the lower rod, check whether the axle offset to one side or not!

As offset to the left, please shorten the length of lower rod on the right side, or increasing the length of the left side of the rod!

Or adjustment on the contrary! Then complete above to next step.

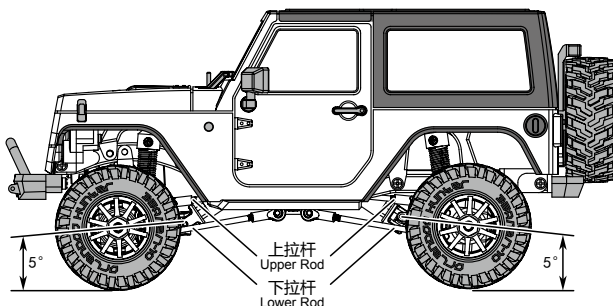

车桥扭曲偏移调平后将模型放置于平面，检查车轮是否有前后位置及车桥角度偏差。如有偏差请按以下说明调整。

前后桥输出轴和平面的倾斜角度约为5度，角度过大或过小可能会增加轴效应，导致模型运行不流畅。如角度过大，请缩短上拉杆的长度或增加下拉杆的长度；如角度过小，请增加上拉杆的长度或缩短下拉杆的长度。

如前桥太靠前，请同时缩短上下拉杆的长度；太靠后，请同时增加上下拉杆的长度。

后桥调整方式同前桥。

The inclination angle of the front and rear axle between the output shaft and the plane was about 5 degrees, angle is too large or too small may increase shaft effect, and will also cause the model to run not smooth.

If the angle is too large, shorten the length of the upper rod or increase the length of the lower rod; if the angle is too small, increase the length of the upper rod or shorten the length of lower rod.

If the front axle is too close front, please also shorten the length of the upper and lower rod at the same time; if too close the rear side, please also increase the length of the upper and lower rod at the same time. Please note that rear axle adjustment method as same as the front axle adjustment method.

配重/重心调整 COUNTERWEIGHT / WEIGHT ADJUSTMENT

模型加入设备后重心位置会发生改变，可在底盘上增加配重来达到前后左右的平衡，底盘以上配重不宜过重，配重物放置位置越低，则车辆稳定性越好。

您还可购买轮毂配重环增加4个轮胎的重量，或使用软铅丝或焊锡丝在轮毂和胎皮之间均匀缠绕达到配重效果，注意左右两侧轮胎配重要一致，前轮可适当增加配重。轮毂配重后，整车重心进一步降低，行进起伏路面时车辆扭曲更加仿真，爬陡坡时更能增加抓地力，重心降低后更不易翻车，性能更稳定！

Gravity position will be changed after the model was added equipment, you can add the balance weight the chassis to achieve equilibrium around. The over Chassis weight should not be too heavy, and the lower placement of balance weight, the vehicle stability will be better.

You can also buy the wheel hub balance weight to increase the weight of the four tires, or use a soft lead wire or solder between the hub and the tire cover wound achieve uniform weight effect.

Please note that the weight between left and right sides of the tire should be same, the front wheel can be appropriate to increase the weight, after the wheel hub the counterweight, the vehicle center of gravity will be lower. When the vehicle travelling the rough road, the twist much more like real vehicle, better grip while climbing a steep hillside, the center of gravity lower, more difficult to overturn and stable performance!